

JVC

SERVICE MANUAL

STEREO INTEGRATED AMPLIFIER

MODEL No. **AX-440BK**



Contents

	Page		Page
Safety Precautions	1-2	Adjustment Procedures	1-8
Front Panel	1-3	Schematic Diagram	Insertion
Operation	1-4	Connection Diagram	Insertion
Specifications	1-5	Parts List	Separate Volume Insertion
Block Diagram	1-6	Internal Block Diagrams of ICs	1-9
Removal Procedures	1-7		

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges or the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.

5. Leakage current check

(Electrical shock hazard testing)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.


- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5 mA AC (r.m.s.).

● Alternate check method.

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 ohms per volt or more sensitivity in the following manner. Use an AC line cord directly into the AC outlet. Connect a $1,500 \Omega$ 10 W resistor parallel by a $0.15 \mu\text{F}$ AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

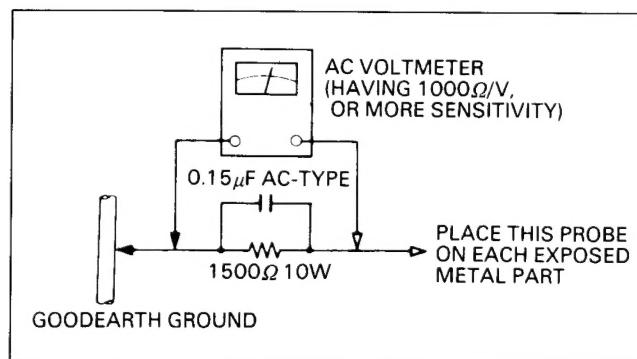

CHECK THE VOLTAGE SELECTOR'S SETTING

(Except for U.S.A., Canada, Australia, U.K. and Continental Europe.)


Before inserting the power plug, please check that the voltage selector's setting corresponds with the line voltage in your area. If it doesn't, be sure to reset the voltage selector before this equipment.

The voltage selector may be located on the rear or bottom of the unit, or underneath the platter.

CAUTION: Before setting the voltage selector to the proper voltage, disconnect the power plug.

FRONT PANEL

These instructions are prepared for three models: AX-330BK/AX-440BK/AX-550BK. Therefore, read the items below concerning each model.

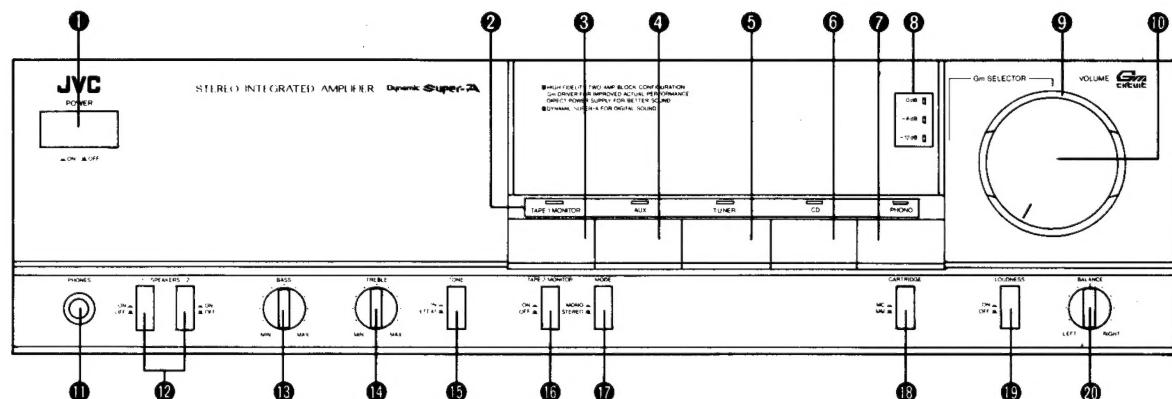

① POWER

ON (—): Press this button to turn the power on.
OFF (■): Set to this position to turn the power off.

Notes:

- When power is not supplied to this amplifier for 2 – 3 days, the source select button pressed before the power was switched off may be lost when the power is switched on again. If this happens, set the buttons, etc. again.
- An electronic source selector is used in this unit. When the POWER button is first switched on, two or more sources or no source may be selected. Make sure to input the source select data by pressing one of the source selectors.
- If the POWER button is pressed repeatedly to switch on and off too quickly, the same phenomenon as the above will occur.

② SOURCE INDICATOR

The indicator corresponding to the source select button pressed lights.

③ TAPE 1 MONITOR

Press to listen to a tape deck connected to the TAPE 1 terminals.

④ AUX

Press to listen to the source connected to the AUX terminals.

⑤ TUNER

Press to listen to radio broadcasts by a tuner connected to the TUNER terminals.

⑥ CD

Press to listen to the source connected to the CD terminals.

⑦ PHONO

Press to listen to records played by a turntable connected to the PHONO terminals.

⑧ Gm SELECTOR indicators (AX-550BK)

These indicators are illuminated according to the setting of the Gm SELECTOR.

0 dB: Set the Gm SELECTOR so that this indicator lights when listening to a high-volume level.

-6 dB: Set the Gm SELECTOR so that this indicator lights when listening to a middle-volume level.

-12 dB: Set the Gm SELECTOR so that this indicator lights when listening to a low-volume level.

⑨ Gm SELECTOR (AX-550BK)

Setting the Gm selector to -6 dB divides the volume at 0 dB by 4 while setting it to -12 dB divides it by 16. As the Gm selector is turned from 0 dB to -6 dB and -12 dB, residual noise becomes progressively less. Use the Gm selector together with the VOLUME control.

⑩ VOLUME

Controls the volume of the speakers and headphones.

⑪ PHONES (Headphones jack)

Plug stereo headphones into this jack for private listening.

⑫ SPEAKERS

Press to switch the speakers connected to the SPEAKERS 1 or 2 terminals on (—) and off (■).

⑬ Note: (AX-330BK, AX-440BK)

- When speakers are connected to only one pair of SPEAKERS terminals, press only the SPEAKERS button of the system connected; if both buttons are pressed, sound will not be heard from either speaker system. When two pairs of speakers are connected and either or both SPEAKERS buttons are pressed, sound will be heard from either or both speaker system(s).

⑭ BASS

Turn clockwise to boost bass response and counterclockwise to decrease it.

⑮ TREBLE

Turn clockwise to boost treble response and counterclockwise to decrease it.

⑯ TONE (AX-440BK, AX-550BK)

ON (—): Press to adjust the tone with the BASS and TREBLE controls.

DEFEAT (■): Press to this position to obtain a standard (flat) frequency response.

⑰ TAPE 2 MONITOR

ON (—): Set to this position to listen to the tape deck connected to the TAPE 2 terminals of this unit. If your tape deck is of the 3-head type, you can monitor the recorded sound while recording by setting this button to ON.

OFF (■): Keep this button set to this position, except when you want to listen to the tape deck connected to the TAPE 2 terminals of this unit.

OPERATION

Before operation, always be sure to set VOLUME at minimum.

When the volume is increased after selecting a source position with no equipment connected to the input terminal, other connected devices (such as speakers) may be adversely affected by external noise and inductive hum.

Listening to broadcasts

- Connect a tuner to the TUNER terminals on the rear panel.
- Press the POWER button on.
- Press the TUNER button and make sure that the TAPE 1 MONITOR and TAPE 2 MONITOR buttons are set to off.
- Select the speaker system with the SPEAKERS switches.
- Operate the tuner according to its instruction manual.
- Adjust the VOLUME, LOUDNESS, BALANCE and BASS/TREBLE controls.

Listening to records

- Connect a turntable to the PHONO terminals on the rear panel.
- Press the POWER button on.
- Set the CARTRIDGE button of this unit according to the cartridge in use. (AX-440BK, AX-550BK)
- Press the PHONO button and make sure that the TAPE 1 MONITOR and TAPE 2 MONITOR buttons are set to off.
- Select the speaker system with the SPEAKERS switches.
- Operate the turntable according to its instruction manual.
- Adjust the VOLUME, LOUDNESS, BALANCE and BASS/TREBLE controls.

Listening to tapes

To listen to the tape deck connected to the TAPE 1 or TAPE 2 terminals.

- Connect a tape deck to the PLAY terminals of TAPE 1 or TAPE 2.
- Press the POWER button on.
- Press the TAPE 1 MONITOR button to play back the TAPE 1 deck. For playback of the TAPE 2 deck, press the TAPE 2 MONITOR button to ON (—).
- Select the speaker system with the SPEAKERS switches.
- Operate the tape deck for playback according to its instruction manual.
- Adjust the playback sound controls as required.

Note:

- Do not place the tape deck directly on the amplifier, because it may cause the amplifier to malfunction.

Using stereo headphones

Stereo headphones can be plugged into the front panel jack. Plugging headphones into the PHONES jack does not switch off the speaker sound.

Recording tapes

To record from disc sources on to a tape deck.

- Connect a tape deck to the REC terminals of the TAPE 1 or TAPE 2 terminals.
- Press the POWER button on.
- Select a speaker system if you wish to hear the sound while recording.
- Press the PHONO button.
- Operate the turntable.
- Operate the tape deck for recording.

To record from other sources (TUNER, CD, AUX)

Press the TUNER, CD or AUX button to record radio broadcasts, or the source connected to the CD, AUX terminals.

All other operations are identical to when recording from disc source.

TROUBLESHOOTING

What appears to be a malfunction may not always be serious.

Make sure first . . .

No sound and no light

Is the AC plug connected properly?

Are the connections made correctly?

No sound from speakers

Are speaker cords connected?

Are the SPEAKERS buttons correctly set?

Is the VOLUME control properly set?

Is your source component correctly set?

Sound from one speaker only

Are speaker cords connected correctly?

Is BALANCE control set to one extreme or the other?

Loud hum during record playing

Is turntable grounded?

Try to change cord path.

Howling noise during record playing

Is turntable too close to a speaker?

SPECIFICATIONS


AX-330BK
OVERALL CHARACTERISTICS

Output power : 60 watts per channel into 8 ohms at 1 kHz (DIN).
 55 watts per channel, min. RMS, both channels driven, into 8 ohms from 20 Hz to 20 kHz, with no more than 0.007 % total harmonic distortion.
 55 watts per channel, min. RMS, both channels driven, into 8 ohms at 1 kHz with no more than 0.003 % total harmonic distortion, (measured by JVC Audio Analyzer System)
 Total harmonic distortion : 0.007 % (20 Hz – 20 kHz, 8 ohms) at 55 watts
 Intermodulation distortion : 0.007 % (60 Hz : 7 kHz = 4 : 1, 8 ohms) at 55 watts
 Power band width : 5 Hz – 50 kHz (IHF, 0.05 %, 8 ohms both channels driven)
 Frequency response : 5 Hz – 80 kHz +0, -3 dB (8 ohms)
 Damping factor : 35 (1 kHz, 8 ohms)
 Input terminals
 Input sensitivity/impedance (1 kHz)
 PHONO : 2.5 mV/47 kohms
 CD/AUX/TUNER/ : 150 mV/43 kohms
 TAPE 1, 2
 Signal-to-noise ratio
 PHONO : 71 dB ('66 IHF)
 CD/AUX/TUNER/ : 100 dB ('66 IHF)
 TAPE 1, 2
 PHONO : 80 dB ('78 IHF)
 (REC OUT)
 CD/AUX/TUNER/ : 76 dB ('78 IHF)
 TAPE 1, 2 (SP OUT)
 PHONO : 67 dB (DIN)
 CD/AUX/TUNER/ : 68 dB (DIN)
 TAPE 1, 2
 Tone controls : TREBLE: +8 ±1 dB
 -8 ±1 dB
 (at 10 kHz)
 BASS: +8 ±1 dB
 -8 ±1 dB
 (at 100 Hz)
 Loudness controls : +6 dB (at 100 Hz)
 (Volume control at +4 dB (at 10 kHz)
 -30 dB position)
EQUALIZER
 PHONO overload capacity
 PHONO : 100 mV (0.02 % THD)
 PHONO RIAA deviation
 PHONO : ±0.5 dB (20 Hz – 20 kHz)
 Recording output
 Output level/impedance
 TAPE REC-1, 2 : 150 mV/2 kohms
GENERAL
 Dimensions : 435(W) x 117(H) x 306(D) mm
 (17-3/16" x 4-5/8" x 12-1/16")
 Weight : 5.7 kg (12.6 lbs.)
 Design and specifications subject to change without notice.


POWER SPECIFICATIONS

Areas	Line voltage & frequency	Power consumption		
		AX-330BK	AX-440BK	AX-550BK
Continental Europe	AC 220 V~, 50 Hz	160 watts	190 watts	210 watts
U.K.	AC 240 V~, 50 Hz	160 watts	190 watts	210 watts
Australia				
Other areas	AC 110/120/220/240 V~, selectable, 50/60 Hz	160 watts	190 watts	210 watts

Block Diagram

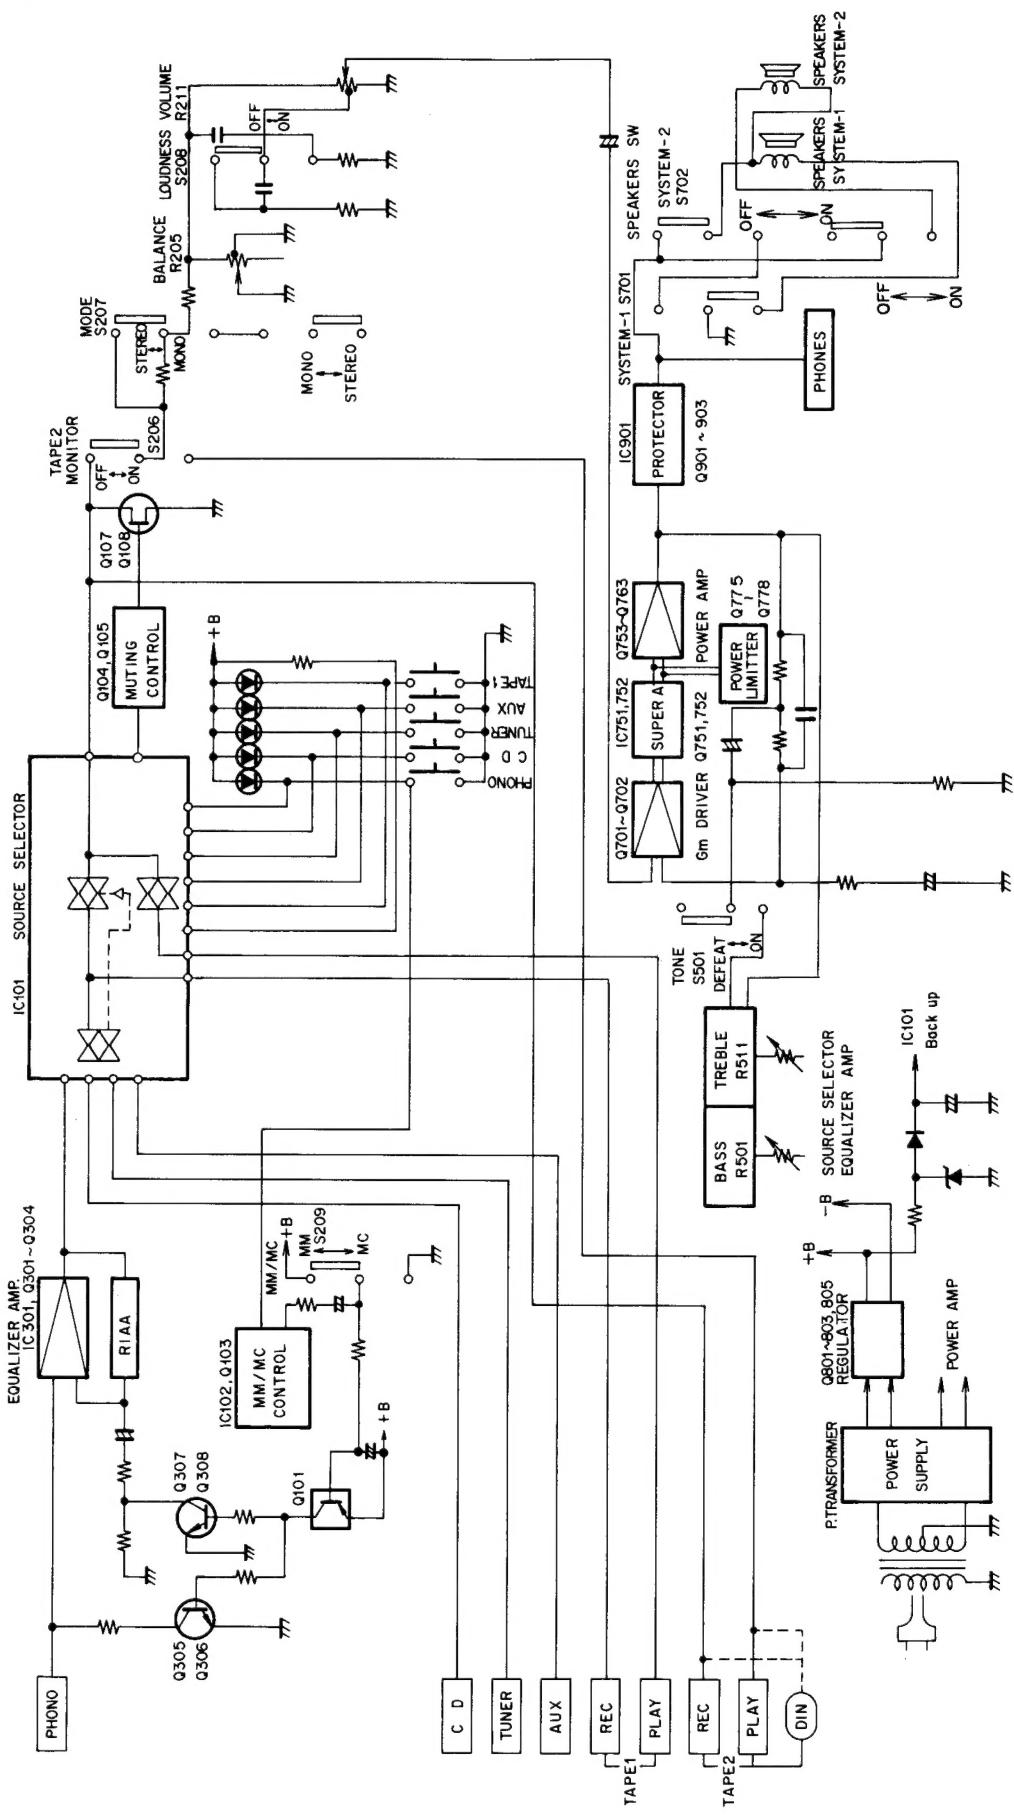

Removal Procedures

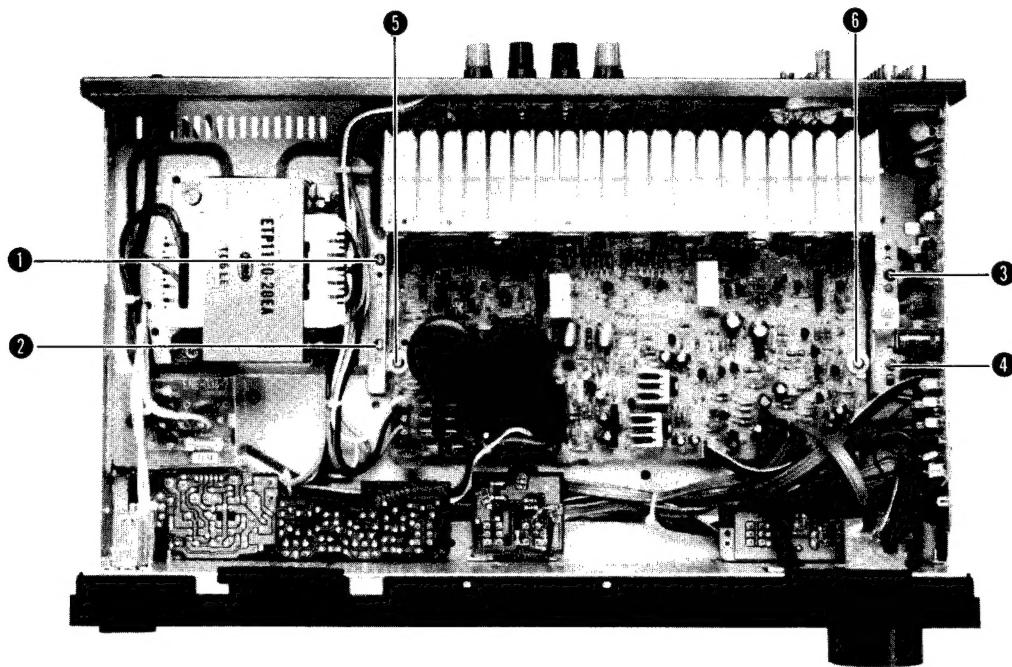

■ Removing the Metal Cover

1. Remove six screws.
2. Remove the metal cover by lifting up its rear section and pulling it backward while holding it on incline.


■ Removing the Front Panel

1. Remove the metal cover.
2. Pull out the volume knob and remove the nut.
3. Remove three plastic rivets on the upper part of the front panel and three screws from the lower part.

■ Removing the Power Transistors


1. Remove the metal cover.
2. Remove screws 1 – 4.
3. Raise the main amp PC board so that the pattern side faces up.
4. Remove solder from the power transistors.
5. Remove screws 5, 6 and remove the heatsinks together with the power transistors.
6. Remove the retaining screw from the defective power transistor and replace it.

■ Use of New-type Connector

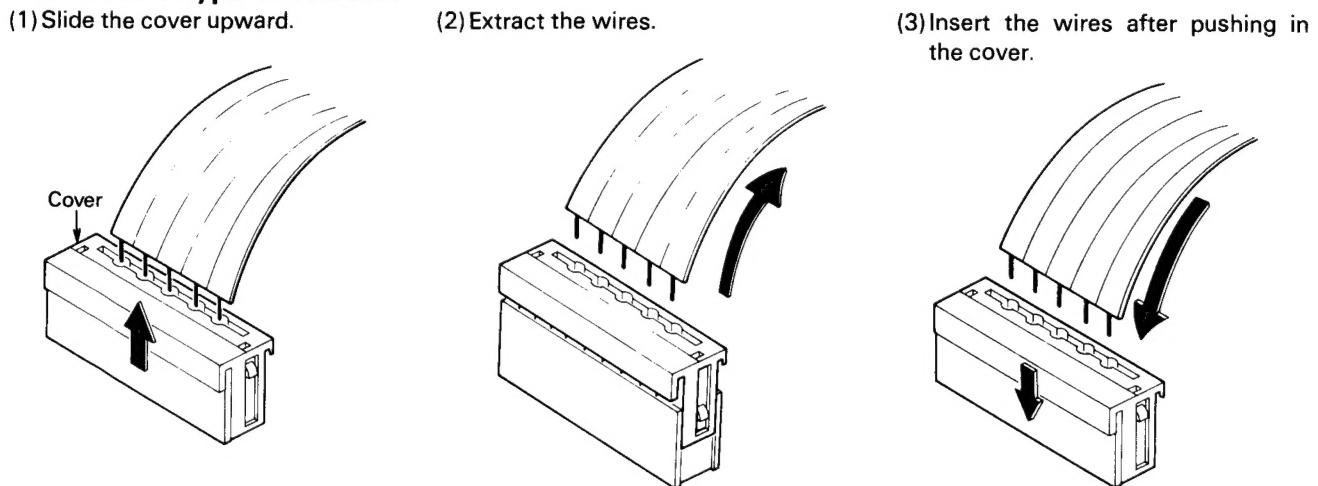

Adjustment Procedures

■ Power Amplifier Idling Adjustment

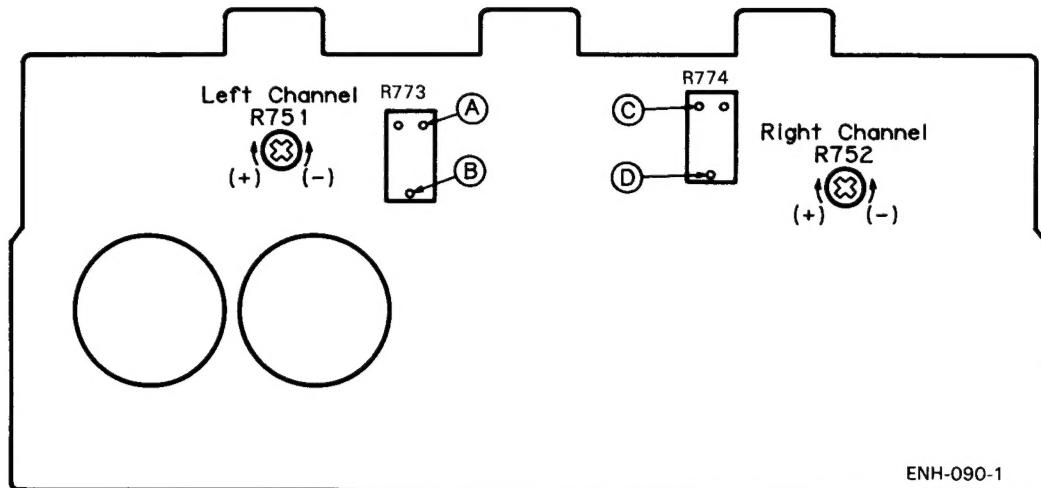

1. Before tuning on the power, turn the semi-fixed resistors (R751 for L channel and R752 for R channel) of the power amplifier circuit board fully counterclockwise.

2. Adjust the semi-fixed resistor (R751 and R752) so that the voltage at the following test points of the power amplifier circuit board is within a range of 3 ~ 5 mV after the power is turned on.

L channel: Measure the voltage between test point **A** (emitter of Q761) and output at the test point **B**.

R channel: Meaure the voltage between test point **C** (emitter of Q762) and output at the test point **D**.

3. Readjust resistors R751 and R752 about 10 minutes after the power is turned on (the heatsink temperature must be sufficiently high) so that the voltage at the test points becomes 11 mV.


Confirm that the voltage does not vary when the heat-sink temperature increases further.

Note: Be sure to perform the measurement with the probes and cabinet of the measuring equipment separated from the grounding terminals of AX-440BK or other measuring equipment.

Schematic Diagram

Notes:



1. shows DC voltage to the
2. indicates \pm B power supply
3. indicates signal path.

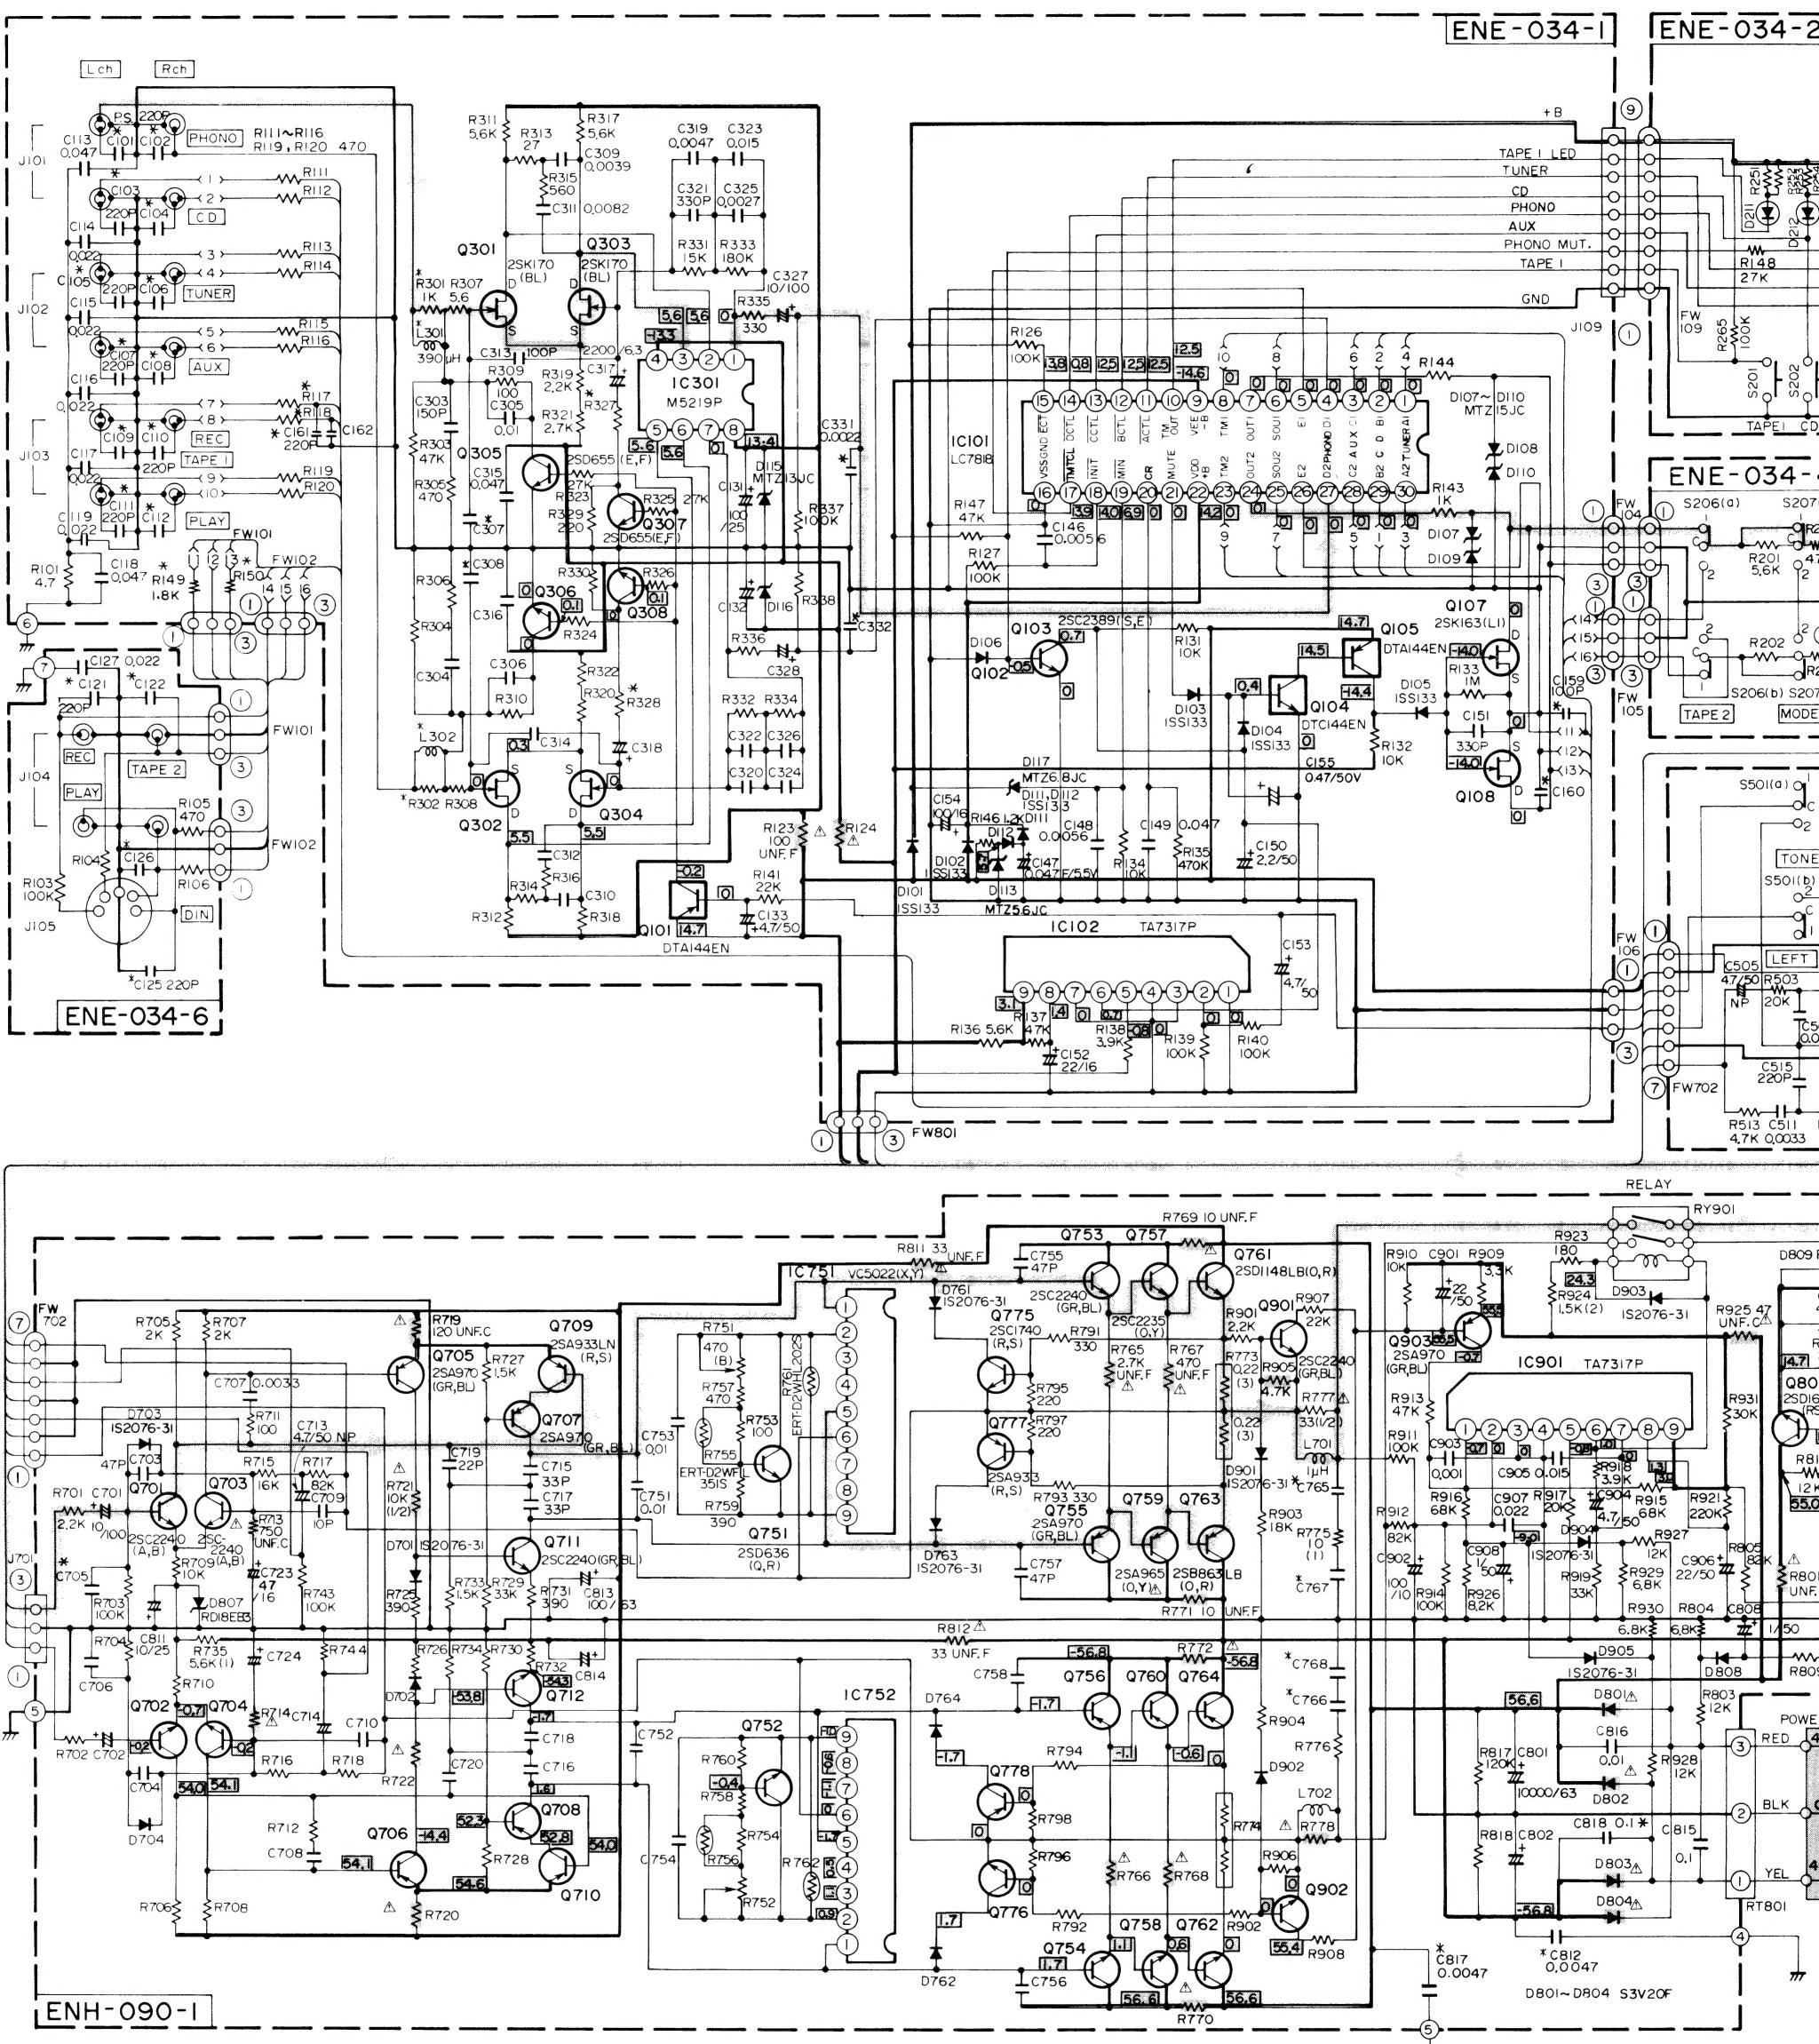


Notes:


1. shows DC voltage to the chassis with no signal input.
2. indicates \pm B power supply.
3. indicates signal path.

- When replacing the parts in the darkened area () and those marked with Δ , be sure to use the designated parts to ensure safety.
- This is the standard circuit diagram.
The design and contents are subject to change without notice.

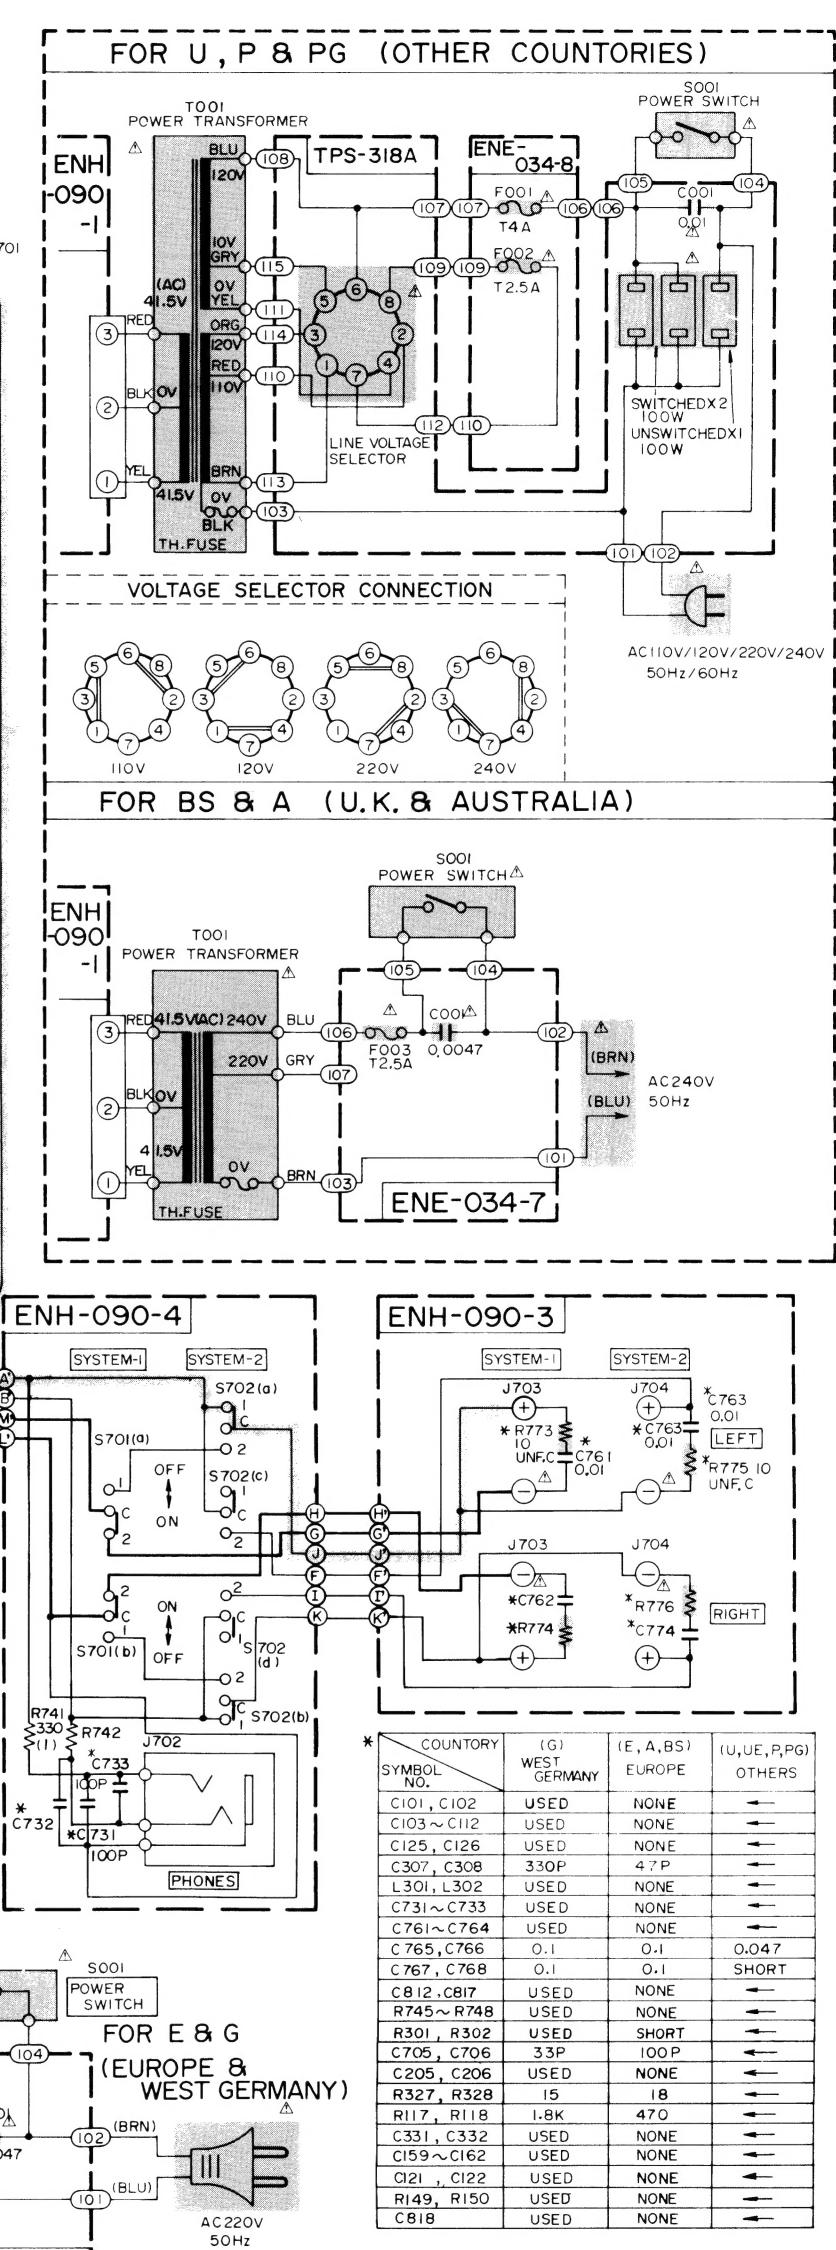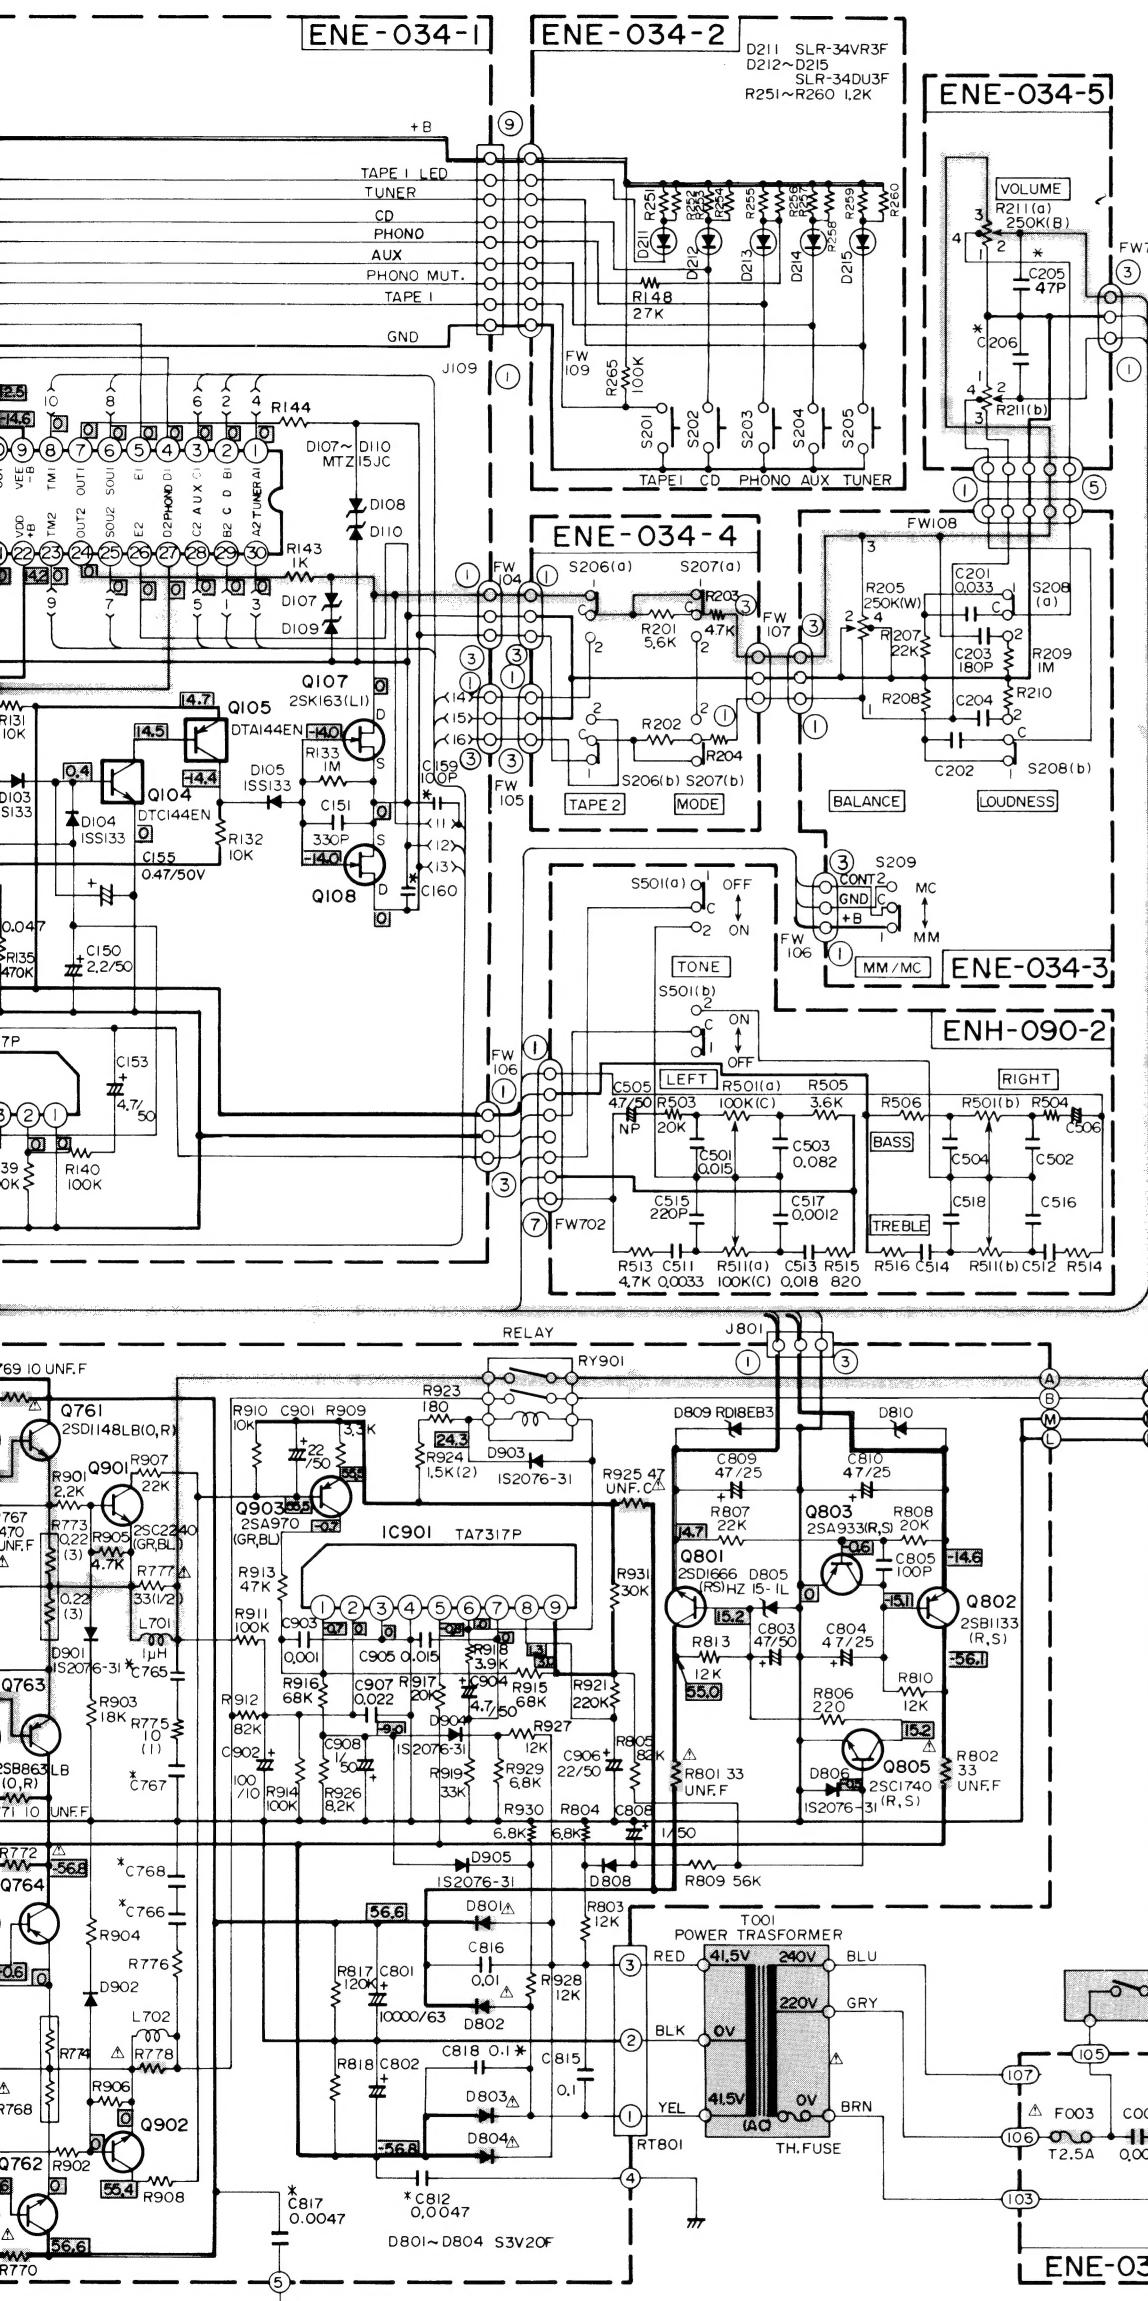

Connection Diagram

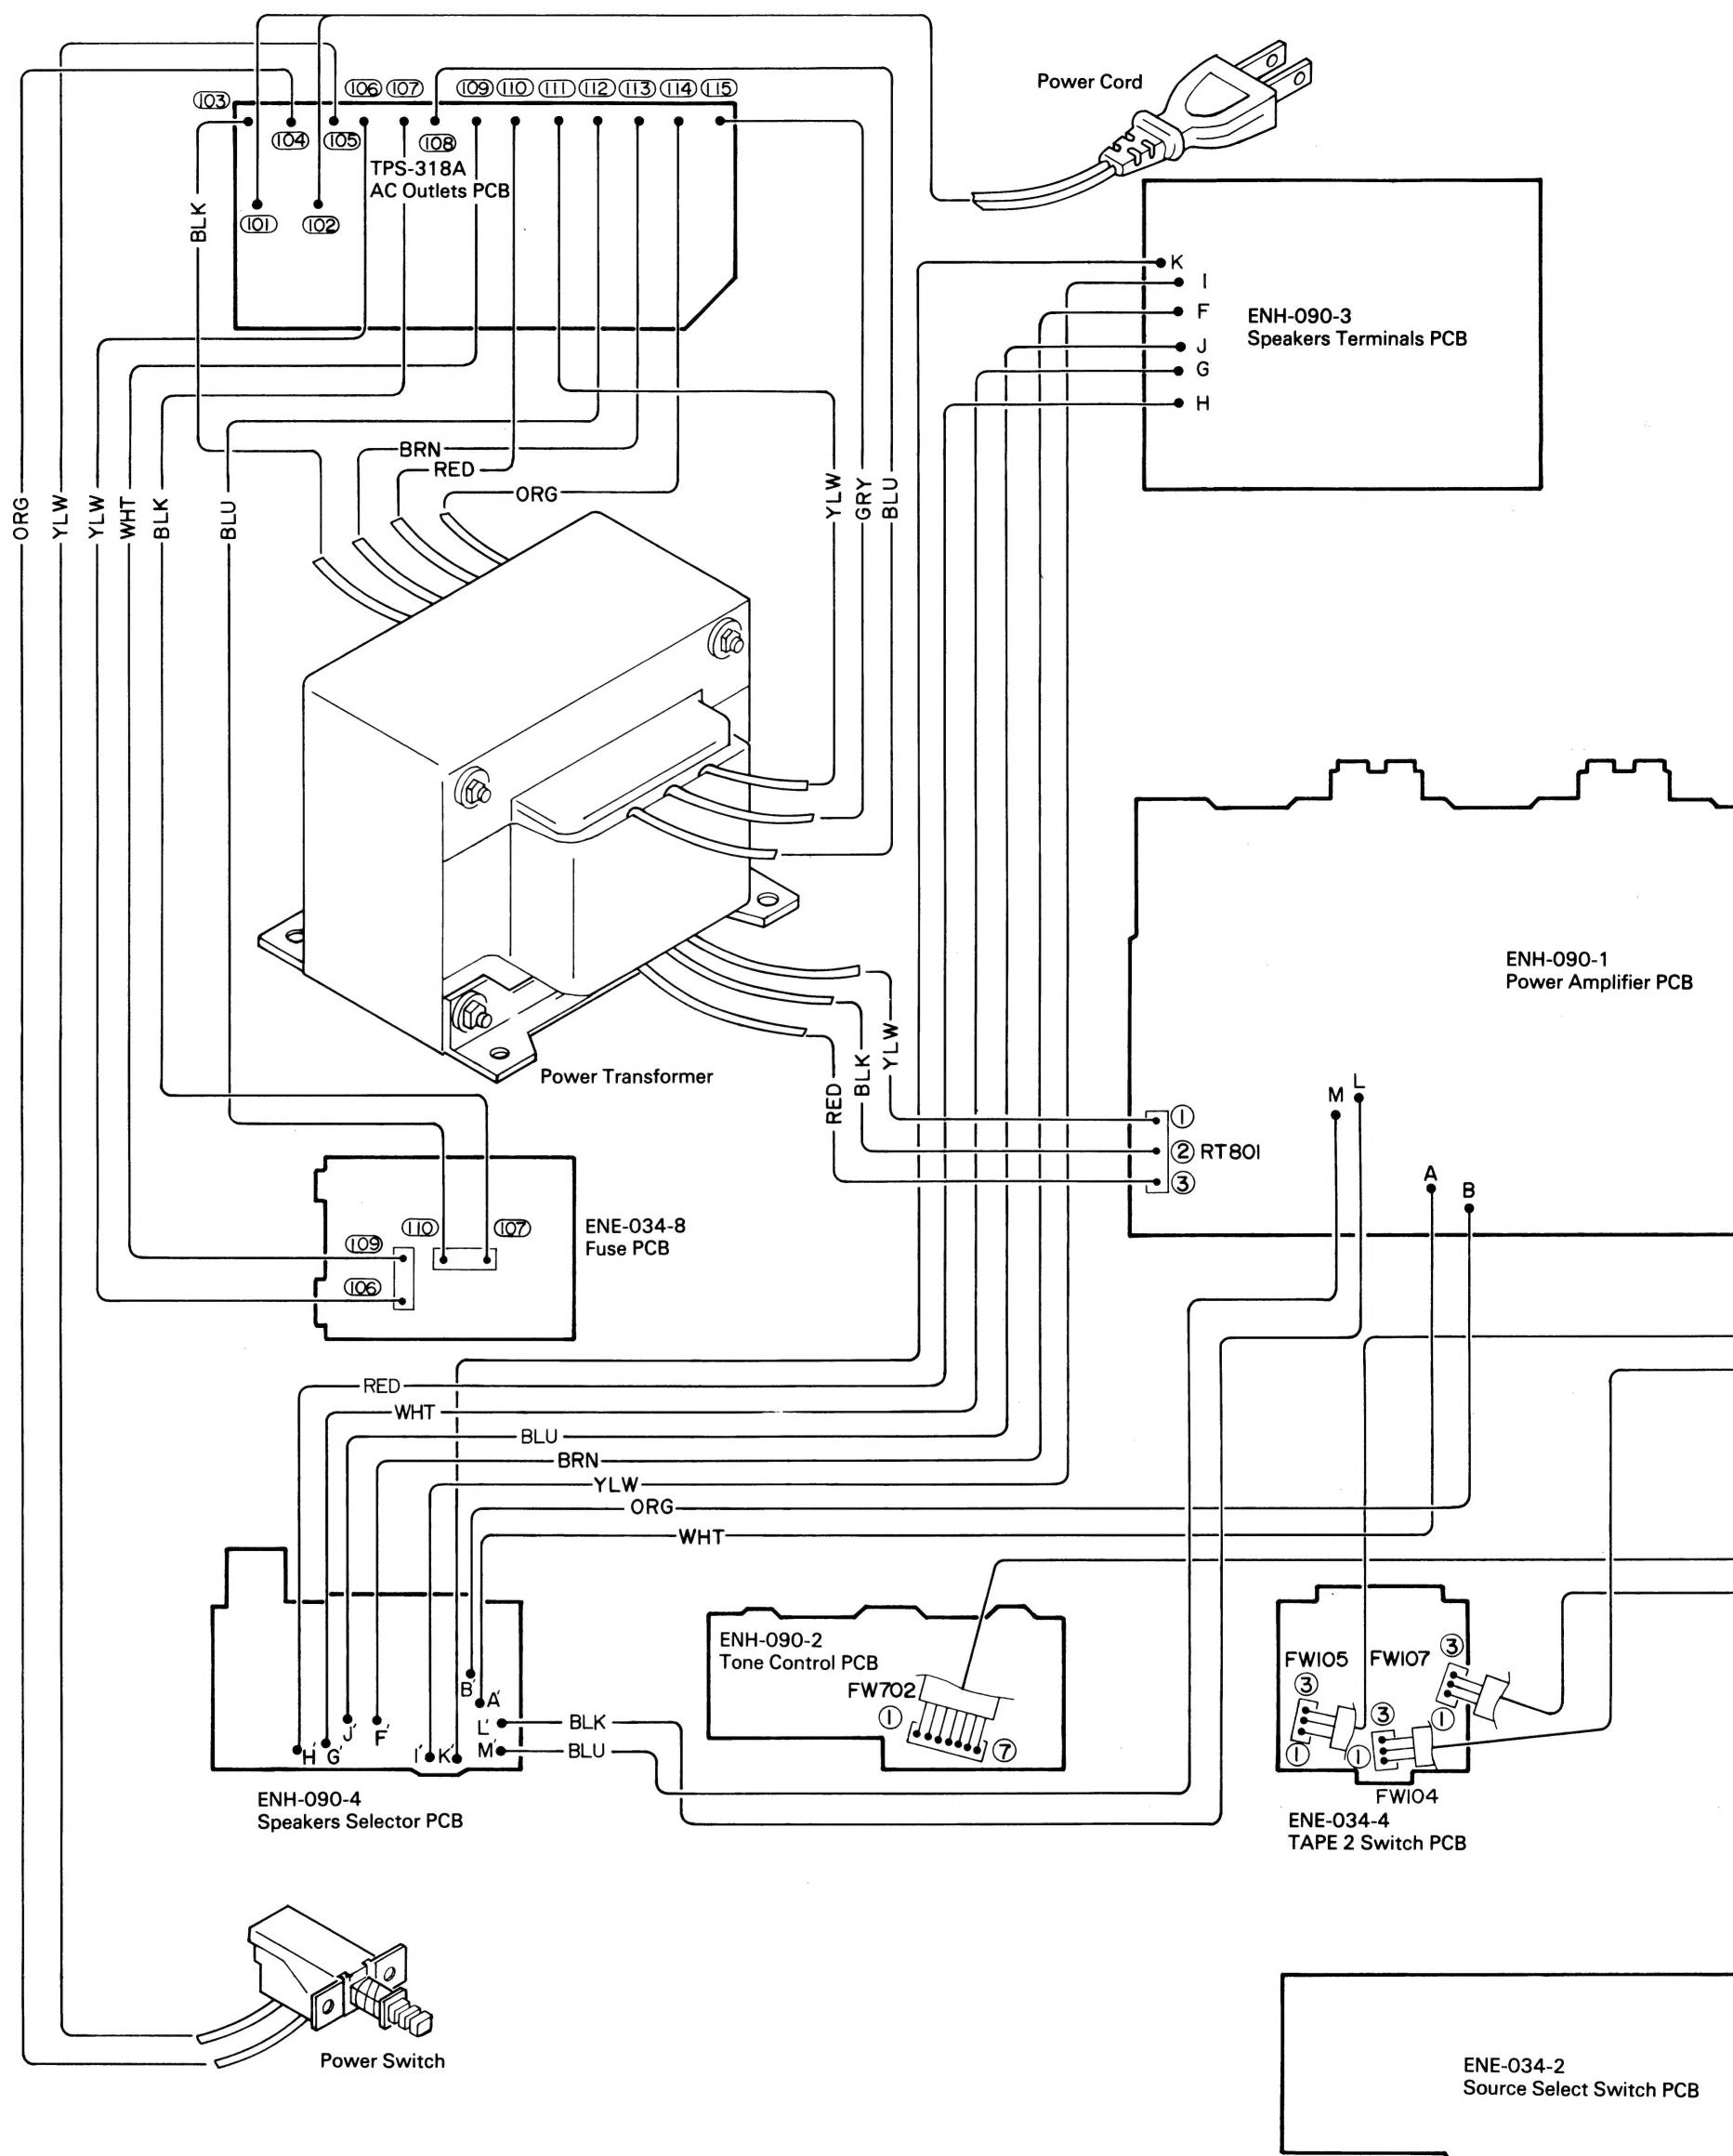

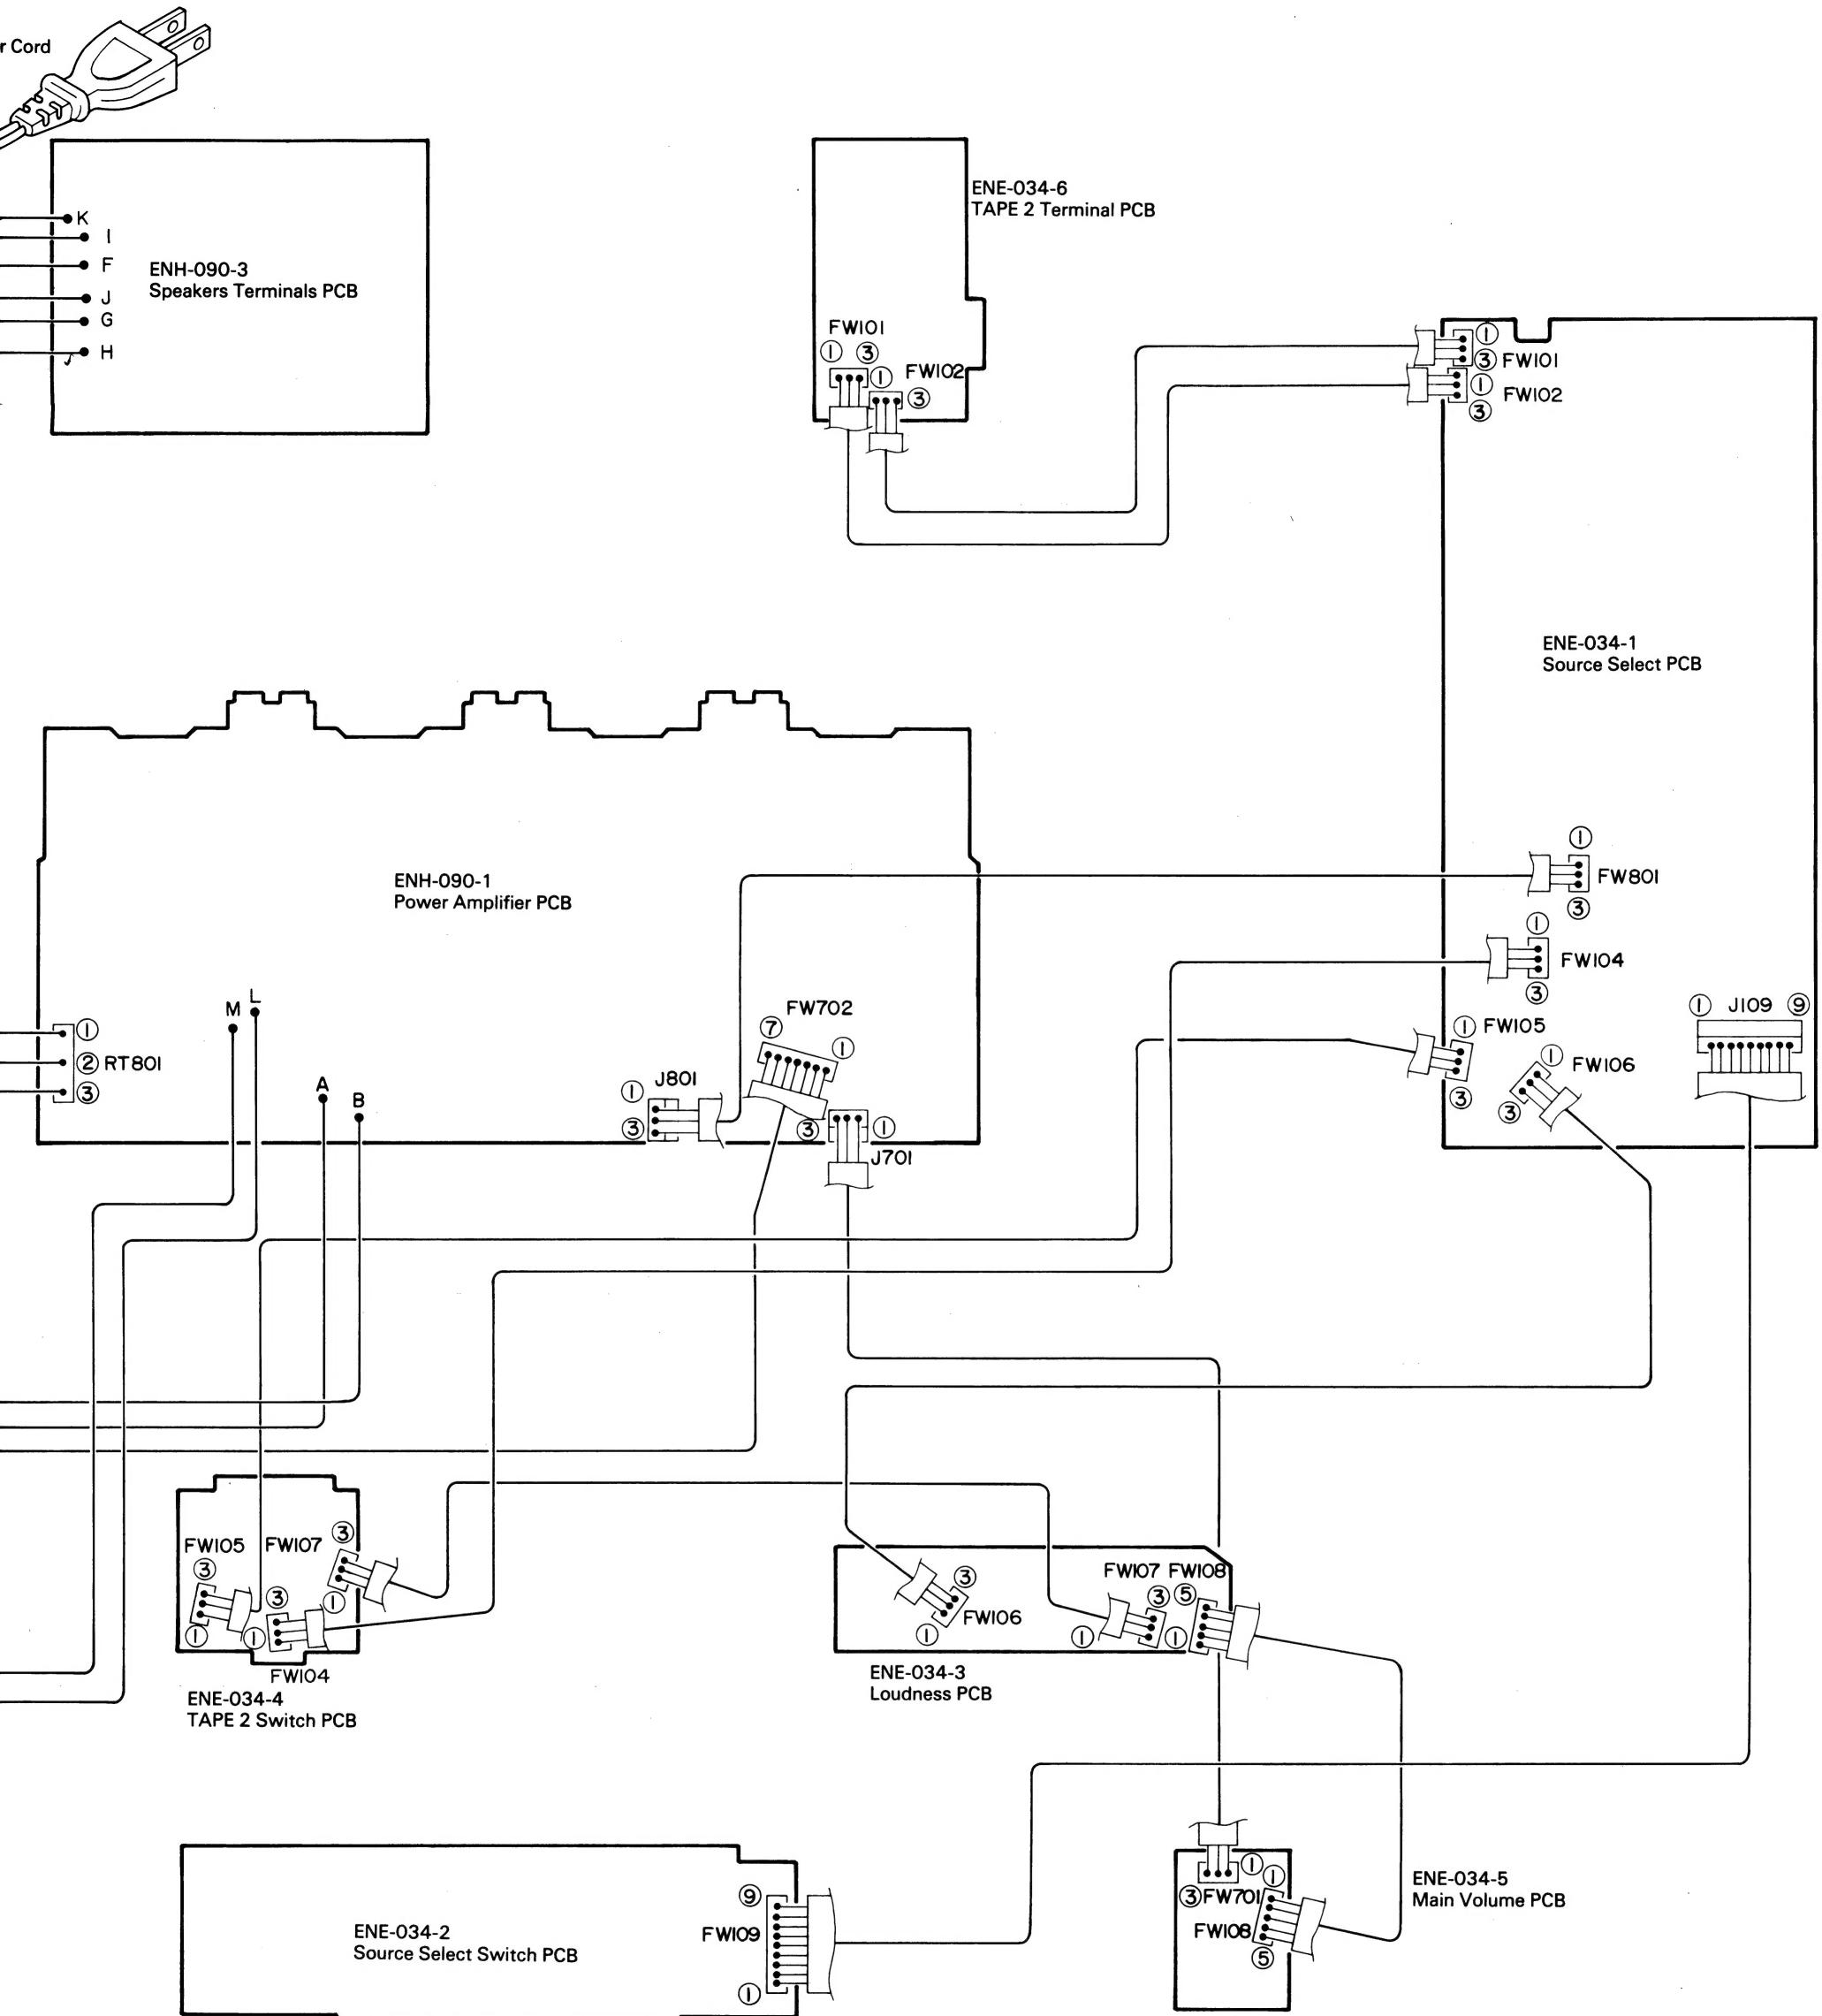


PARTS LIST

Contents


Main Parts Locations.....	2-2
Exploded View and Parts List	2-3
Printed Circuit Board Ass'y and Parts List.....	2-6
■ ENH-090 □ Power Amplifier PC Board Ass'y	2-6
■ ENE-034 □ Source Select PC Board Ass'y	2-9
■ TPS-318 <u>A</u> Voltage Selector PC Board Ass'y	2-11
Packing Materials and Part Numbers	2-12
Accessories List	2-12

Main Parts Locations


■ Front View

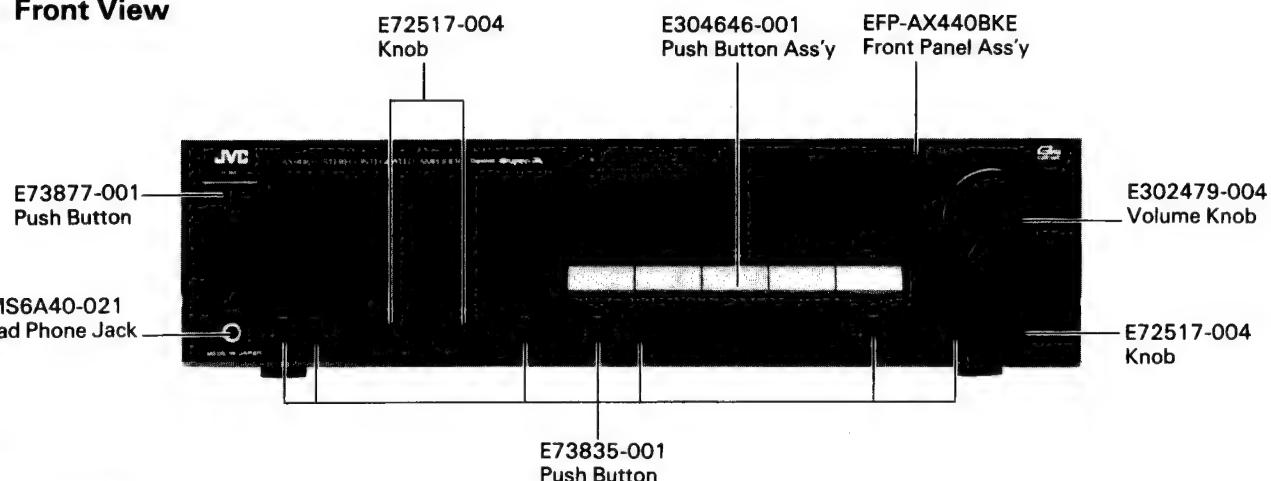

■ Top View

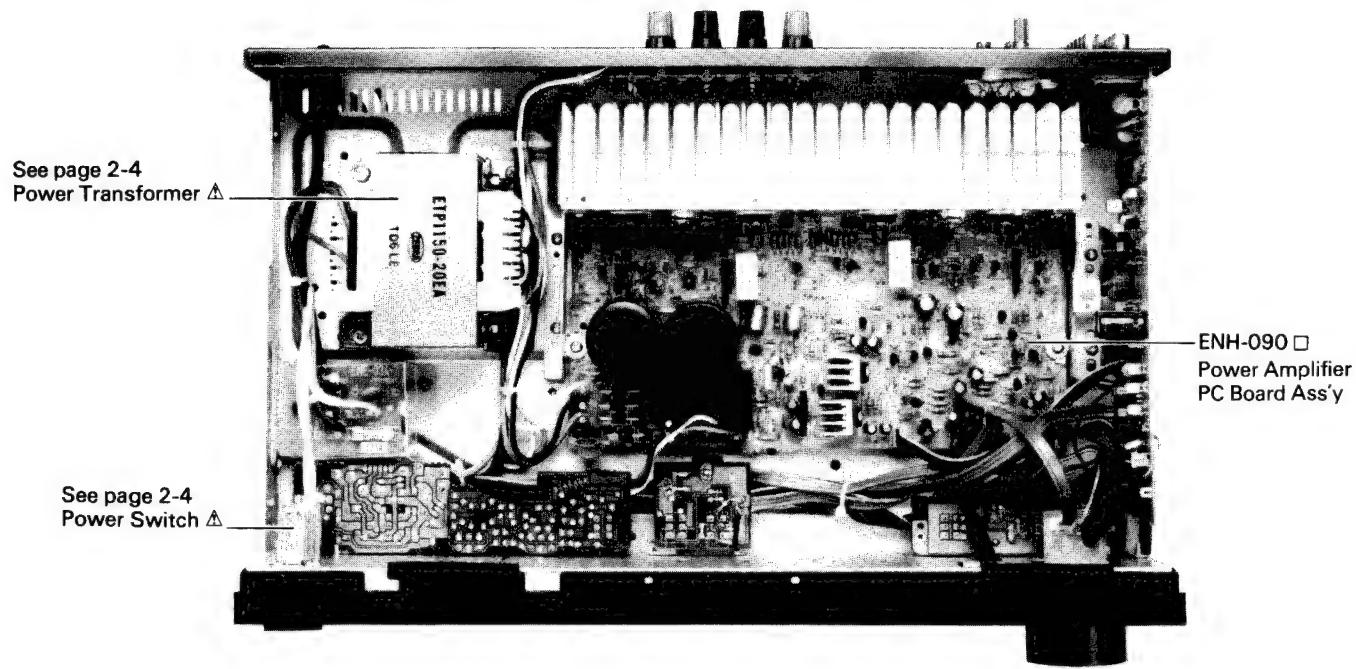


■ Rear View

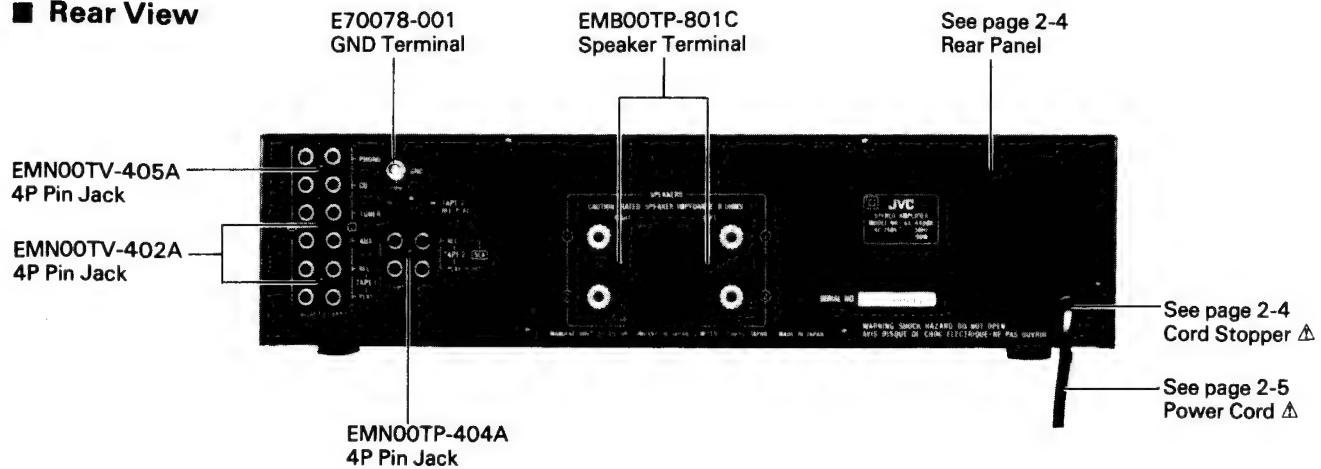

Δ : Safety Parts

Exploded View and Parts List

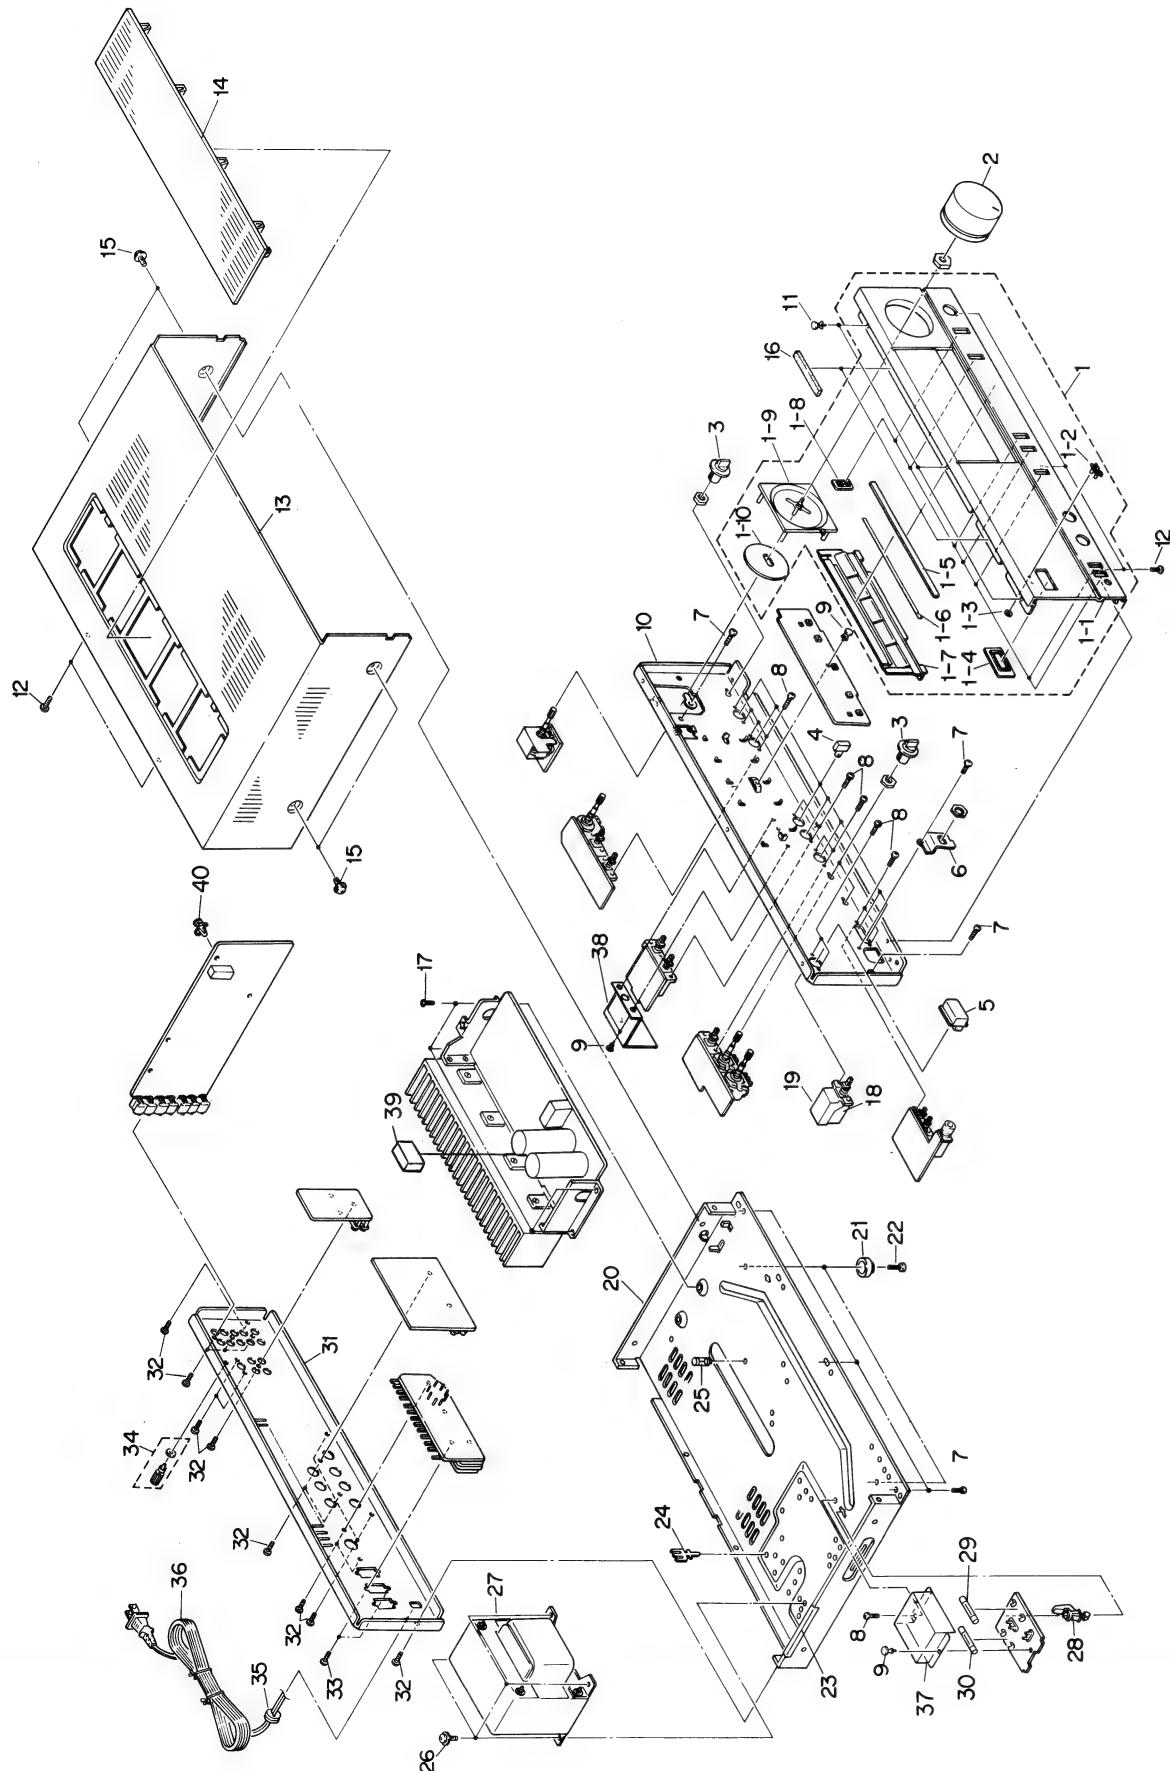

△	Item No.	Part Number	Part Name	Q'ty	Description	Areas
△	1	EFP-AX-440BKE	Front Panel Ass'y	1		
	1-1	E25584-002	Front Panel	1		
	1-2	E72968-001	JVC Mark	1		
	1-3	E60912-003	Speed Nut	1		
	1-4	E73878-001	Push Button Escutcheon	1		
△	1-5	E304602-001	IND. Sheet	1		
	1-6	E72437-010	Sheet	1		
	1-7	E304646-001	Push Button Ass'y	1		
	1-8	E73836-001	Push Button Escutcheon	7		
	1-9	E304603-001	Knob Ring	1		
△	1-10	E74025-001	Sheet	1		
2	2	E302479-004	Volume Knob	1		
3	3	E72517-004	Knob	3		
4	4	E73835-001	Push Button	7		
5	5	E73877-001	Push Button	1		
△	6	E73218-001	Head Phone Bracket	1		
7	7	SBSB3008CC	Screw	7		
8	8	SBST3006CC	Screw	13		
9	9	E48729-008	Plastic Rivet	4		
10	10	E25586-001	Front Bracket	1		
△	11	E48729-009	Plastic Rivet	3		
12	12	SBSB3008M	Screw	5		P, PG, A, G, U
13	13	E24721-008	Metal Cover	1		E, BS
14	14	E25026-004	Metal Cover	1		E, BS
15	15	E23862-005	Grille	1		
△	15	E61660-004	Special Screw	4		
16	16	EXO060007N40S	Spacer	2		
17	17	SBST3006Z	Screw	4		
△	18	QSP1106-005	Push Switch	1	Power	P, PG, U
△	18	QSP1106-004	Push Switch	1	Power	E, A, G
△	19	QSP1106-004BS	Push Switch	1	Power	BS
20	20	E71004-001	Switch Cover	1		
21	21	E10717-011	Chassis Base	1		
22	22	E47227-012	Foot	4		
22	22	SBSB3010Z	Screw	4		
△	23	E65778-002	Spacer	1		
24	24	QHW3059-001	Wire Clamp	1		
25	25	E71335-002	Fastener	1		
26	26	E65389-002	Screw	4		
△	27	ETP1150-20FA	Power Transformer	1		P, PG, U
△	28	ETP1150-20EA	Power Transformer	1		E, A, G
△	28	ETP1150-20EABS	Power Transformer	1		BS
△	29	E34455-001	Fastener	1		
△	29	QMF51A2-4ROS	Fuse	1	F001	P, PG, U
△	30	QMF51A2-2R5S	Fuse	1	F002	P, PG, U
△	31	QMF51A2-2R5S	Fuse	1	F003	E, A, G
△	31	QMF51E2-2R5SBS	Fuse	1	F003	BS
32	32	E25549-005	Rear Panel	1		P, PG, U
32	32	E25549-008	Rear Panel	1		E, A, G, BS
32	32	E73273-001	Screw	14		
△	33	SDSB3008M	Screw	2		P, PG, U
△	34	E70078-001	GND Terminal	1		
△	35	QHS3876-162	Cord Stopper	1		P, PG, E, A, G, U
△	35	QHS3876-162BS	Cord Stopper	1		BS

△ : Safety Parts

Item No.	Part Number	Part Name	Q'ty	Description	Areas
36	QMP2560-244 QMP3900-200 QMP7600-200 QMP9017-008BS	Power Cord Power Cord Power Cord Power Cord Protector	1 1 1 1 1		A E, G P, PG, U BS
37	E303823-001	Protector	1		
38	E74074-002	Shield Bracket	1		
39	E3400-384	Felt Spacer	1		
40	E69384-002	Fastener	1		
—	E303260-096	Rating Label	1		E, G

△: Safety Parts

The Marks for Designated Areas

P, PG..... U.S. Military Market
E Europe
A Australia
G West Germany
BS U.K.
U Other Countries


No mark indicates all areas.

Printed Circuit Board Ass'y and Parts List

■ ENH-090 □ Power Amplifier PC Board Ass'y

Note: ENH-090 □ Varies according to the areas employed. See note (1) when placing an order.
Note (1)

PC Board Ass'y	Designated Areas
ENH-090 [D]	U.S. Military Market & Other Countries
ENH-090 [E]	Europe, Australia, U.K.
ENH-090 [F]	West Germany

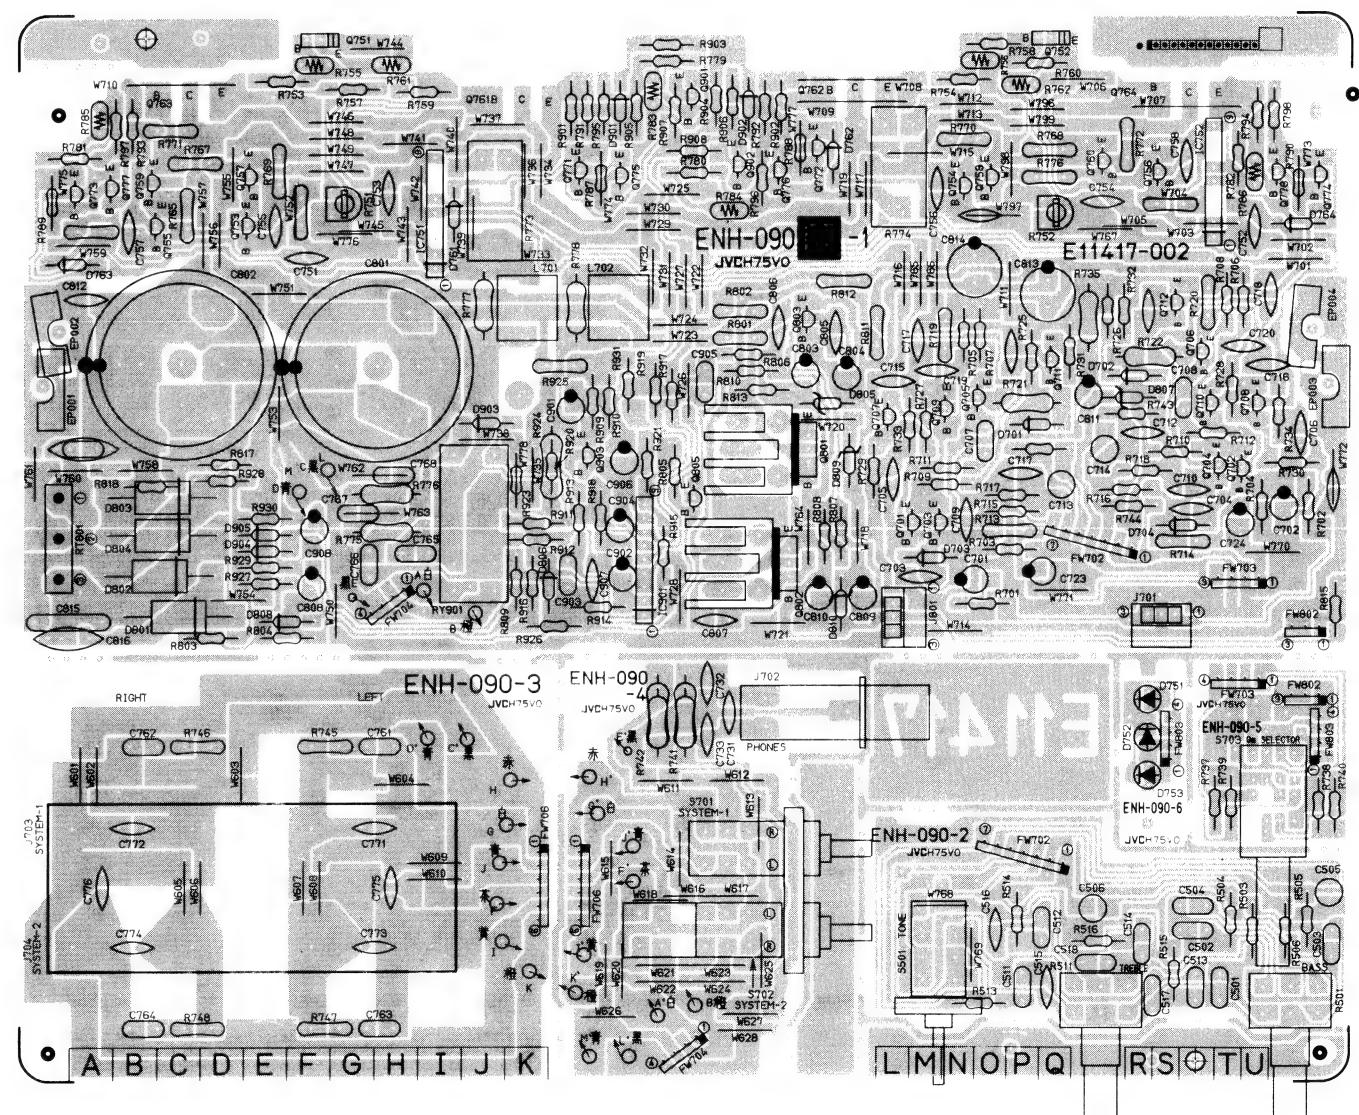

TRANSISTORS

△	ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
	Q701	2SC2240(A,B)	SILICON	TOSHIBA	
	Q702	2SC2240(A,B)	SILICON	TOSHIBA	
	Q703	2SC2240(A,B)	SILICON	TOSHIBA	
	Q704	2SC2240(A,B)	SILICON	TOSHIBA	
	Q705	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q706	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q707	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q708	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q709	2SA933LN(R,S)	SILICON	ROHM	
	Q710	2SA933LN(R,S)	SILICON	ROHM	
	Q711	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q712	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q751	2SD636(Q,R)	SILICON	MATSUSHITA	
	Q752	2SD636(Q,R)	SILICON	MATSUSHITA	
	Q753	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q754	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q755	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q756	2SA970(GR,BL)	SILICON	TOSHIBA	
	Q757	2SC2235(O,Y)	SILICON	TOSHIBA	
	Q758	2SC2235(O,Y)	SILICON	TOSHIBA	
	Q759	2SA965(O,Y)	SILICON	TOSHIBA	
	Q760	2SA965(O,Y)	SILICON	TOSHIBA	
	Q761	2SD1148LB(O,R)	SILICON	TOSHIBA	
	Q762	2SD1148LB(O,R)	SILICON	TOSHIBA	
	Q763	2SB863LB(O,R)	SILICON	TOSHIBA	
	Q764	2SB863LB(O,R)	SILICON	TOSHIBA	
	Q775	2SC1740(R,S)	SILICON	ROHM	
	Q776	2SC1740(R,S)	SILICON	ROHM	
	Q777	2SA933(R,S)	SILICON	ROHM	
	Q778	2SA933(R,S)	SILICON	ROHM	
	Q801	2SD1666(R,S)	SILICON	SANYO	
	Q802	2SC1133(R,S)	SILICON	SANYO	
	Q803	2SA933(R,S)	SILICON	ROHM	
	Q805	2SC1740(R,S)	SILICON	ROHM	
	Q901	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q902	2SC2240(GR,BL)	SILICON	TOSHIBA	
	Q903	2SA970(GR,BL)	SILICON	TOSHIBA	

CAPACITORS

△	ITEM	PART NUMBER	DESCRIPTION		AREA
	C501	QFN81HK-153	0.015MF	50V	MYLAR
	C502	QFN81HK-153	0.015MF	50V	MYLAR
	C503	QFN81HK-823	0.082MF	50V	MYLAR
	C504	QFN81HK-823	0.082MF	50V	MYLAR
	C505	QEN51HM-475	4.7MF	50V	NON POLE
	C506	QEN51HM-475	4.7MF	50V	NON POLE
	C511	QFN81HK-332	3300PF	50V	MYLAR
	C512	QFN81HK-332	3300PF	50V	MYLAR
	C513	QFN81HK-183	0.018MF	50V	MYLAR
	C514	QFN81HK-183	0.018MF	50V	MYLAR
	C515	QCS21HJ-221	220PF	50V	CERAMIC
	C516	QCS21HJ-221	220PF	50V	CERAMIC
	C517	QFN81HK-122	1200PF	50V	MYLAR
	C518	QFN81HK-122	1200PF	50V	MYLAR
	C701	EETB2AM-106E	10MF	100V	ELECTRO
	C702	EETB2AM-106E	10MF	100V	ELECTRO
	C703	QCS21HJ-470	47PF	50V	CERAMIC
	C704	QCS21HJ-470	47PF	50V	CERAMIC
	C705	QCS21HJ-101	100PF	50V	CERAMIC
	C705	QCS21HJ-101	100PF	50V	CERAMIC
	C705	QCS21HJ-330	33PF	50V	CERAMIC
	C706	QCS21HJ-101	100PF	50V	CERAMIC
	C706	QCS21HJ-330	33PF	50V	CERAMIC
	C707	QFN81HK-332	3300PF	50V	MYLAR
	C708	QFN81HK-332	3300PF	50V	MYLAR
	C709	QCS21HJ-100	10PF	50V	CERAMIC
	C710	QCS21HJ-100	10PF	50V	CERAMIC
	C713	QEN51HM-475	4.7MF	50V	NON POLE
	C714	QEN51HM-475	4.7MF	50V	NON POLE
	C715	QCS21HJ-330	33PF	50V	CERAMIC
	C716	QCS21HJ-330	33PF	50V	CERAMIC
	C717	QCS21HJ-330	33PF	50V	CERAMIC
	C718	QCS21HJ-330	33PF	50V	CERAMIC
	C719	QCS21HJ-220	22PF	50V	CERAMIC
	C720	QCS21HJ-220	22PF	50V	CERAMIC
	C723	QETB1CM-476	47MF	16V	ELECTRO
	C724	QETB1CM-476	47MF	16V	ELECTRO
	C731	QCS21HJ-101	100PF	50V	CERAMIC
	C732	QCS21HJ-101	100PF	50V	CERAMIC
	C733	QCS21HJ-101	100PF	50V	CERAMIC
	C751	QCF21HP-103	0.01MF	50V	CERAMIC
	C752	QCF21HP-103	0.01MF	50V	CERAMIC
	C753	QCF21HP-103	0.01MF	50V	CERAMIC
	C754	QCF22HP-103	0.01MF	50V	CERAMIC
	C755	QCS22HJ-470	47PF	500V	CERAMIC
	C756	QCS22HJ-470	47PF	500V	CERAMIC
	C757	QCS22HJ-470	47PF	500V	CERAMIC
	C758	QCS21HJ-470	47PF	500V	CERAMIC
	C761	QFN81HK-103	0.01MF	50V	MYLAR
	C762	QFN81HK-103	0.01MF	50V	MYLAR
	C763	QFN81HK-103	0.01MF	50V	MYLAR
	C764	QFN81HK-103	0.01MF	50V	MYLAR
	C765	QFN81HK-104	0.1MF	50V	MYLAR
	C765	QFN81HK-104	0.1MF	50V	MYLAR
	C765	QFN81HK-473	0.047MF	50V	MYLAR
	C766	QFN81HK-104	0.1MF	50V	MYLAR
	C766	QFN81HK-104	0.1MF	50V	MYLAR
	C766	QFN81HK-473	0.047MF	50V	MYLAR
	C767	QFN81HK-104	0.1MF	50V	MYLAR
	C767	QFN81HK-104	0.1MF	50V	MYLAR
	C768	QFN81HK-104	0.1MF	50V	MYLAR
	C768	QFN81HK-104	0.1MF	50V	MYLAR
	C801	EEW6304-109E	10000MF	63V	ELECTRO
	C802	EEW6304-109E	10000MF	63V	ELECTRO
	C803	QETB1HM-476	47MF	50V	ELECTRO
	C804	QETB1HM-476	47MF	50V	ELECTRO
	C805	QCS21HJ-101	100PF	50V	CERAMIC
	C808	QETB1HM-105	1MF	50V	ELECTRO
	C809	QETB1EM-476	47MF	25V	ELECTRO
	C810	QETB1EM-476	47MF	25V	ELECTRO
	C811	QETB1EM-106	10MF	25V	ELECTRO
	C812	QFN82AK-472	4700PF	100V	MYLAR
	C813	QETB1JM-107	100MF	63V	ELECTRO
	C814	QETB1JM-107	100MF	63V	ELECTRO
	C815	QFH42EK-104	0.1MF	250V	M-MYLAR
	C816	QCE22HP-103A	0.01MF	500V	CERAMIC
	C817	QFM32AK-104	0.1MF	100V	MYLAR
	C901	QETB1HM-226	22MF	50V	ELECTRO
	C902	QETB1AM-107	100MF	10V	ELECTRO
	C903	QFN81HK-102	1000PF	50V	MYLAR
	C904	QETB1HM-475	4.7MF	50V	ELECTRO
	C905	QFN81HK-153	0.015MF	50V	MYLAR
	C906	QETB1HM-226	22MF	50V	ELECTRO
	C907	QCF21HP-223	0.022MF	50V	CERAMIC
	C908	QETB1HM-105	1MF	50V	ELECTRO

△ : SAFETY PARTS

RESISTORS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	R501	QVDB98C-E15B	100K (C)	50mW VARIABLE
	R503	QRD148J-203S	20K	1/4W CARBON
	R504	QRD148J-203S	20K	1/4W CARBON
	R505	QRD148J-362S	3.6K	1/4W CARBON
	R506	QRD148J-362S	3.6K	1/4W CARBON
	R511	QVDB98C-E15B	100K (C)	50mW VARIABLE
	R513	QRD148J-472S	4.7K	1/4W CARBON
	R514	QRD148J-472S	4.7K	1/4W CARBON
	R515	QRD148J-821S	820	1/4W CARBON
	R516	QRD148J-821S	820	1/4W CARBON
	R701	QRD148J-222S	2.2K	1/4W CARBON
	R702	QRD148J-222S	2.2K	1/4W CARBON
	R703	QRD148J-104S	100K	1/4W CARBON
	R704	QRD148J-104S	100K	1/4W CARBON
	R705	QRD148J-202S	2K	1/4W CARBON
	R706	QRD148J-202S	2K	1/4W CARBON
	R707	QRD148J-202S	2K	1/4W CARBON
	R708	QRD148J-202S	2K	1/4W CARBON
	R709	QRD148J-103S	10K	1/4W CARBON
	R710	QRD148J-103S	10K	1/4W CARBON
	R711	QRD148J-101S	100	1/4W CARBON
	R712	QRD148J-101S	100	1/4W CARBON
△	R713	QRD14CJ-751S	750	1/4W UNF. CARBON
△	R714	QRD14CJ-751S	750	1/4W UNF. CARBON
	R715	QRD148J-163S	16K	1/4W CARBON
	R716	QRD148J-163S	16K	1/4W CARBON
	R717	QRD148J-823S	82K	1/4W CARBON
	R718	QRD148J-823S	82K	1/4W CARBON
△	R719	QRD14CJ-121S	120	1/4W UNF. CARBON
△	R720	QRD14CJ-121S	120	1/4W UNF. CARBON
△	R721	QRD125J-103	10K	1/2W UNF. CARBON
△	R722	QRD125J-103	10K	1/2W UNF. CARBON
	R725	QRD148J-391S	390	1/4W CARBON
	R726	QRD148J-391S	390	1/4W CARBON
	R727	QRD148J-152S	1.5K	1/4W CARBON
	R728	QRD148J-152S	1.5K	1/4W CARBON
	R729	QRD148J-333S	33K	1/4W CARBON
	R730	QRD148J-333S	33K	1/4W CARBON
	R731	QRD148J-391S	390	1/4W CARBON
	R732	QRD148J-391S	390	1/4W CARBON
	R733	QRD148J-152S	1.5K	1/4W CARBON
△	R734	QRD148J-152S	1.5K	1/4W CARBON
△	R735	QRG012J-562AF	5.6K	1W O.M. FILM
△	R741	QRG012J-331A	330	1W O.M. FILM
△	R742	QRG012J-331A	330	1W O.M. FILM
	R743	QRD148J-104S	100K	1/4W CARBON
	R744	QRD148J-104S	100K	1/4W CARBON
△	R745	QRD14CJ-100S	10	1/4W UNF. CARBON F
△	R746	QRD14CJ-100S	10	1/4W UNF. CARBON F
△	R747	QRD14CJ-100S	10	1/4W UNF. CARBON F
△	R748	QRD14CJ-100S	10	1/4W UNF. CARBON F
	R751	QVZ3518-471	470(B)	0.1W VARIABLE
	R752	QVZ3518-471	470(B)	0.1W VARIABLE
	R753	QRD148J-101S	100	1/4W CARBON
	R754	QRD148J-101S	100	1/4W CARBON
	R755	ERT-D2WFL351S	350	1/4W THERMISTER
	R756	ERT-D2WFL351S	350	1/4W THERMISTER
	R757	QRD148J-471S	470	1/4W CARBON
	R758	QRD148J-471S	470	1/4W CARBON
	R759	QRD148J-391S	390	1/4W CARBON
	R760	QRD148J-391S	390	1/4W CARBON
	R761	ERT-D2WHL202S	2K	1/4W THRMISTER
	R762	ERT-D2WHL202S	2K	1/4W THRMISTER
△	R765	QRZ0077-272	2.7K	1/4W FUSIBLE
△	R766	QRZ0077-272	2.7K	1/4W FUSIBLE
△	R767	QRZ0077-471	470	1/4W FUSIBLE
△	R768	QRZ0077-471	470	1/4W FUSIBLE
△	R769	QRZ0077-100	10	1/4W FUSIBLE
△	R770	QRZ0077-100	10	1/4W FUSIBLE
△	R771	QRZ0077-100	10	1/4W FUSIBLE
△	R772	QRZ0077-100	10	1/4W FUSIBLE
△	R773	ERF032K-R22	0.22	3W CEMENT
△	R774	ERF032K-R22	0.22	3W CEMENT
△	R775	QRG012J-100A	10	1W O.M. FILM
△	R776	QRG012J-100A	10	1W O.M. FILM
△	R777	QRD125J-330	33	1/2W UNF. CARBON
△	R778	QRD125J-330	33	1/2W UNF. CARBON
	R791	QRD148J-331S	330	1/4W CARBON
	R792	QRD148J-331S	330	1/4W CARBON
	R793	QRD148J-331S	330	1/4W CARBON
	R794	QRD148J-331S	330	1/4W CARBON
	R795	QRD148J-221S	220	1/4W CARBON
	R796	QRD148J-221S	220	1/4W CARBON
	R797	QRD148J-221S	220	1/4W CARBON
	R798	QRD148J-221S	220	1/4W CARBON
△	R801	QRZ0077-330	33	1/4W FUSIBLE
△	R802	QRZ0077-330	33	1/4W FUSIBLE

RESISTORS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	R803	QRD148J-123S	12K	1/4W CARBON
	R804	QRD148J-682S	6.8K	1/4W CARBON
	R805	QRD148J-823S	82K	1/4W CARBON
	R806	QRD148J-221S	220	1/4W CARBON
	R807	QRD148J-223S	22K	1/4W CARBON
	R808	QRD148J-203S	20K	1/4W CARBON
	R809	QRD148J-563S	56K	1/4W CARBON
	R810	QRD148J-123S	12K	1/4W CARBON
△	R811	QRZ0077-330	33	1/4W FUSIBLE
△	R812	QRZ0077-330	33	1/4W FUSIBLE
	R813	QRD148J-123S	12K	1/4W CARBON
	R817	QRD148J-124S	120K	1/4W CARBON
	R818	QRD148J-124S	120K	1/4W CARBON
	R901	QRD148J-272S	2.7K	1/4W CARBON
	R902	QRD148J-272S	2.7K	1/4W CARBON
	R903	QRD148J-183S	18K	1/4W CARBON
	R904	QRD148J-183S	18K	1/4W CARBON
	R905	QRD148J-123S	12K	1/4W CARBON
	R906	QRD148J-123S	12K	1/4W CARBON
	R907	QRD148J-223S	22K	1/4W CARBON
	R908	QRD148J-223S	22K	1/4W CARBON
	R909	QRD148J-332S	3.3K	1/4W CARBON
	R910	QRD148J-103S	10K	1/4W CARBON
	R911	QRD148J-104S	100K	1/4W CARBON
	R912	QRD148J-823S	82K	1/4W CARBON
	R913	QRD148J-473S	47K	1/4W CARBON
	R914	QRD148J-104S	100K	1/4W CARBON
	R915	QRD148J-683S	68K	1/4W CARBON
	R916	QRD148J-683S	68K	1/4W CARBON
	R917	QRD148J-203S	20K	1/4W CARBON
	R918	QRD148J-392S	3.9K	1/4W CARBON
	R919	QRD148J-333S	33K	1/4W CARBON
	R921	QRD148J-224S	220K	1/4W CARBON
	R923	QRD148J-181S	180	1/4W CARBON
△	R924	QRG022J-152A	1.5K	2W O.M. FILM
△	R925	QRD14CJ-470S	47	1/4W UNF. CARBON
	R926	QRD148J-822S	8.2K	1/4W CARBON
	R927	QRD148J-123S	12K	1/4W CARBON
	R928	QRD148J-123S	12K	1/4W CARBON
	R929	QRD148J-682S	6.8K	1/4W CARBON
	R930	QRD148J-682S	6.8K	1/4W CARBON
	R931	QRD148J-303S	30K	1/4W CARBON

OTHERS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	E11417-002		CIRCUIT BOARD	
	E300209-019		HEAT SINK	
	E67292-002		HEATSINK BRACKET	
	E67293-002		BRACKET(R)	
	E70945-H25		HEAT SINK	
	E73265-002		SPCL SCREW	
	SBSB3008CC		T.SCREW	
	SBSB3008Z		T.SCREW	
	SBSE3012CC		SCREW	
	J701	EMV7112-003	SOCKET	
	J702	QMS6A40-021	JACK ASSY	
	J703	EMB00TP-801C	SPEAKER TERMINAL	
	J704	EMB00TP-801C	SPEAKER TERMINAL	
	J801	EMV7112-003	SOCKET	
	L701	EQL0001-1R0	INDUCTOR	
	L702	EQL0001-1R0	INDUCTOR	
	S501	QST4102-E08	PUSH SWITCH	
	S701	QST4241-E10	PUSH SWITCH	
	S702	QST4241-E10	PUSH SWITCH	
	EP001	E70859-001	EARTH PLATE	
	EP003	E70859-001	EARTH PLATE	D
	EP003	E70859-001	EARTH PLATE	E
	EP003	E70859-001	EARTH PLATE	F
	RT801	E67764-103	R.TERMINAL	
	RY901	ESKD5D24-218	RELAY	


△ : SAFETY PARTS

■ **ENE-034 □ Source Select PC Board Ass'y**

Note: ENE-034 □ Varies according to the areas employed. See note (1) when placing an order.

Note (1)

PC Board Ass'y	Designated Areas
ENE-034 [A]	U.S. Military Market & Other Countries
ENE-034 [B]	Europe, Australia
ENE-034 [C]	West Germany
ENE-034 [D] BS	U.K.

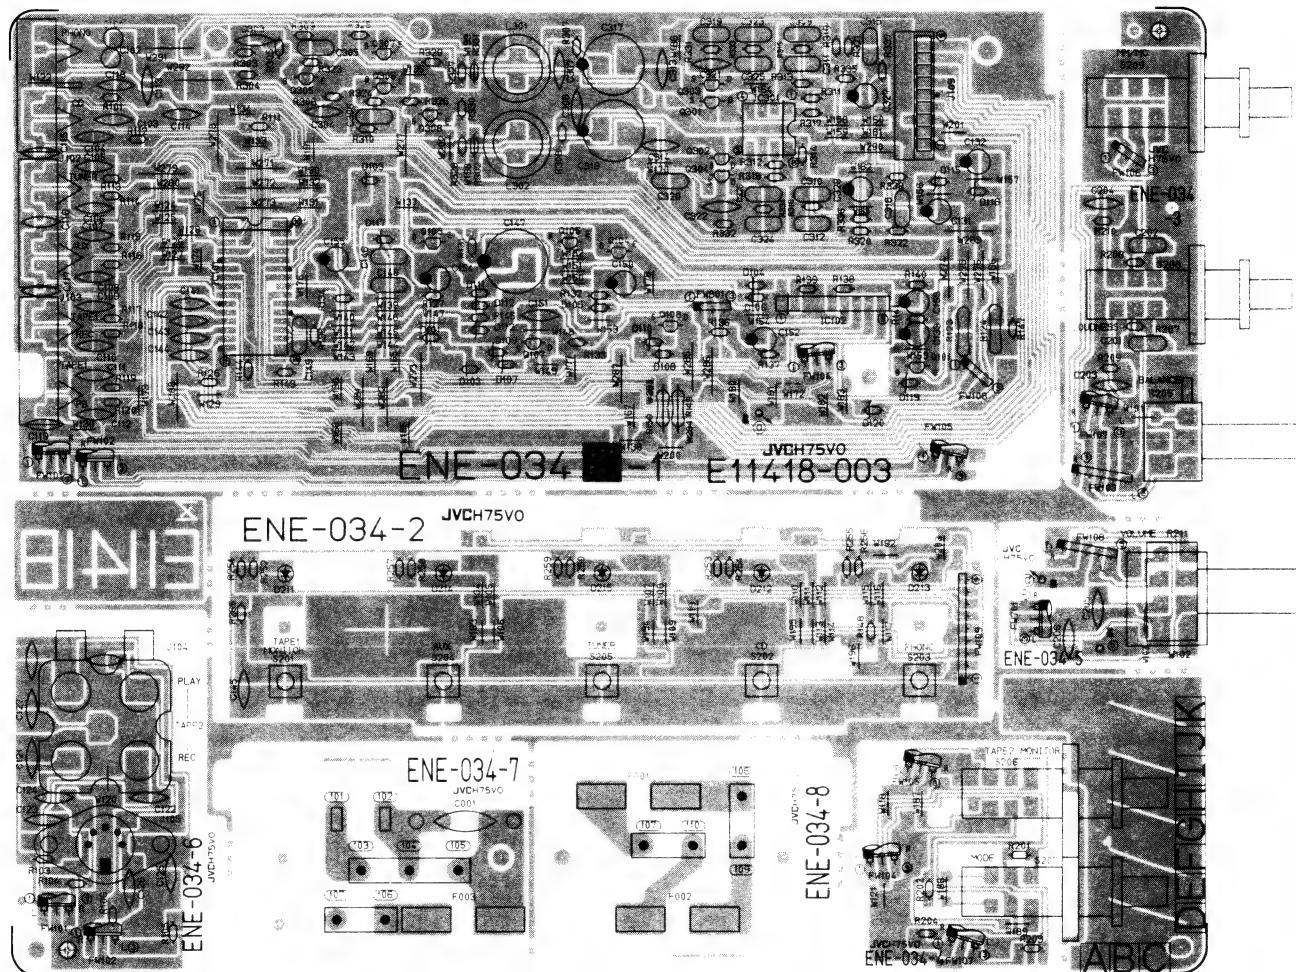

TRANSISTORS

ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
Q101	DTA144EN	SILICON	ROHM	
Q103	2SC2389(S,E)	SILICON	ROHM	
Q104	DTC144EN	SILICON	ROHM	
Q105	DTA144EN	SILICON	ROHM	
Q107	2SK163(L1)	F.E.T	NEC	
Q108	2SK163(L1)	F.E.T	NEC	
Q301	2SK170(BL)	F.E.T	TOSHIBA	
Q302	2SK170(BL)	F.E.T	TOSHIBA	
Q303	2SK170(BL)	F.E.T	TOSHIBA	
Q304	2SK170(BL)	F.E.T	TOSHIBA	
Q305	2SD655(E,F)	SILICON	HITACHI	
Q306	2SD655(E,F)	SILICON	HITACHI	
Q307	2SD655(E,F)	SILICON	HITACHI	
Q308	2SD655(E,F)	SILICON	HITACHI	

I.C.S

ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
IC101	LC7818	I.C.		SANYO
IC102	TA7317P	I.C.		TOSHIBA
IC301	M5219P	I.C.		MITSUBISHI

△ : SAFETY PARTS

DIODES

△	ITEM	PART NUMBER	DESCRIPTION	AREA	MAKER
D101	ISS133	SILICON	ROHM		
D102	ISS133	SILICON	ROHM		
D103	ISS133	SILICON	ROHM		
D104	ISS133	SILICON	ROHM		
D105	ISS133	SILICON	ROHM		
D106	ISS133	SILICON	ROHM		
D107	MTZ15JC	ZENER	ROHM		
D108	MTZ15JC	ZENER	ROHM		
D109	MTZ15JC	ZENER	ROHM		
D110	MTZ15JC	ZENER	ROHM		
D111	ISS133	SILICON	ROHM		
D112	ISS133	SILICON	ROHM		
D113	MTZ5.6JC	ZENER	ROHM		
D115	MTZ13JC	ZENER	ROHM		
D116	MTZ13JC	ZENER	ROHM		
D117	MTZ6.8JC	ZENER	ROHM		
D211	SLR-34VR3F	L.E.D.	ROHM		
D212	SLR-34DU3F	L.E.D.	ROHM		
D213	SLR-34DU3F	L.E.D.	ROHM		
D214	SLR-34DU3F	L.E.D.	ROHM		
D215	SLR-34DU3F	L.E.D.	ROHM		

CAPACITORS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	C307	QCS21HJ-470	47PF	50V CERAMIC B
	C307	QCS21HJ-470	47PF	50V CERAMIC DBS
	C308	QCS21HJ-331	330PF	50V CERAMIC C
	C308	QCS21HJ-470	47PF	50V CERAMIC A
	C308	QCS21HJ-470	47PF	50V CERAMIC B
	C308	QCS21HJ-470	47PF	50V CERAMIC DBS
	C309	QFN81HK-392	3900PF	50V MYLAR
	C310	QFN81HK-392	3900PF	50V MYLAR
	C311	QFN81HK-822	8200PF	50V MYLAR
	C312	QFN81HK-822	8200PF	50V MYLAR
	C313	QCS21HJ-101	100PF	50V CERAMIC A
	C313	QCS21HJ-101	100PF	50V CERAMIC B
	C313	QCS21HJ-101	100PF	50V CERAMIC DBS
	C313	QCS21HJ-330	33PF	50V CERAMIC C
	C314	QCS21HJ-101	100PF	50V CERAMIC A
	C314	QCS21HJ-101	100PF	50V CERAMIC B
	C314	QCS21HJ-101	100PF	50V CERAMIC DBS
	C314	QCS21HJ-330	33PF	50V CERAMIC C
	C315	QFN81HK-473	0.047MF	50V MYLAR
	C316	QFN81HK-473	0.047MF	50V MYLAR
	C317	QETBOJM-228	2200MF	6.3V ELECTRO
	C318	QETBOJM-228	2200MF	6.3V ELECTRO
	C319	QFN81HJ-472	4700PF	50V MYLAR
	C320	QFN81HJ-472	4700PF	50V MYLAR
	C321	QCS21HJ-331	330PF	50V CERAMIC
	C322	QCS21HJ-331	330PF	50V CERAMIC
	C323	QFN81HJ-153	0.015MF	50V MYLAR
	C324	QFN81HJ-153	0.015MF	50V MYLAR
	C325	QFN81HJ-272	2700PF	50V MYLAR
	C326	QFN81HJ-272	2700PF	50V MYLAR
	C327	EETB2AM-106E	10M	100V ELECTRO
	C328	EETB2AM-106E	10M	100V ELECTRO
	C331	QCS21HK-222	2200PF	50V CERAMIC C
	C332	QCS21HK-222	2200PF	50V CERAMIC C

CAPACITORS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
C001	QCZ9019-472	4700PF	400V CERAMIC B	
C001	QCZ9019-472	4700PF	400V CERAMIC C	
C001	QCZ9019-472BS	4700PF	400V CERAMIC DBS	
C101	QFS81HJ-221	220PF	50V POLY C	
C102	QFS81HJ-221	220PF	50V POLY C	
C103	QCS21HJ-221	220PF	50V CERAMIC C	
C104	QCS21HJ-221	220PF	50V CERAMIC C	
C105	QCS21HJ-221	220PF	50V CERAMIC C	
C106	QCS21HJ-221	220PF	50V CERAMIC C	
C107	QCS21HJ-221	220PF	50V CERAMIC C	
C108	QCS21HJ-221	220PF	50V CERAMIC C	
C109	QCS21HJ-221	220PF	50V CERAMIC C	
C110	QCS21HJ-221	220PF	50V CERAMIC C	
C111	QCS21HJ-221	220PF	50V CERAMIC C	
C112	QCS21HJ-221	220PF	50V CERAMIC C	
C113	QCF21HP-473	0.047MF	50V CERAMIC	
C114	QCF21HP-223	0.022MF	50V CERAMIC	
C115	QCF21HP-223	0.022MF	50V CERAMIC	
C116	QCF21HP-223	0.022MF	50V CERAMIC	
C117	QCF21HP-223	0.022MF	50V CERAMIC	
C118	QCF21HP-473	0.047MF	50V CERAMIC	
C119	QCF21HP-223	0.022MF	50V CERAMIC	
C121	QCS21HJ-221	220PF	50V CERAMIC C	
C122	QCS21HJ-221	220PF	50V CERAMIC C	
C125	QCS21HJ-221	220PF	50V CERAMIC C	
C126	QCS21HJ-221	220PF	50V CERAMIC C	
C127	QCF21HP-223	0.022MF	50V CERAMIC	
C131	QETB1EM-107	100MF	25V ELECTRO	
C132	QETB1EM-107	100MF	25V ELECTRO	
C133	QETB1HM-475	4.7MF	50V ELECTRO	
C146	QFN81HJ-562	5600PF	50V MYLAR	
C147	EEZ0502-479	47000MF	5.5V ELECTRO	
C148	QFN81HJ-562	5600PF	50V MYLAR	
C149	QFN81HK-473	0.047MF	50V MYLAR	
C150	QETB1HM-225	2.2MF	50V ELECTRO	
C151	QCS21HJ-331	330PF	50V CERAMIC	
C152	QETB1CM-226	22MF	16V ELECTRO	
C153	QETB1HM-475	4.7MF	50V ELECTRO	
C154	QETB1CM-107	100MF	16V ELECTRO	
C155	QETB1HM-474	0.47MF	50V ELECTRO	
C159	QCS21HJ-101	100PF	50V CERAMIC C	
C160	QCS21HJ-101	100PF	50V CERAMIC C	
C161	QCS21HJ-221	220PF	50V CERAMIC C	
C162	QCS21HJ-221	220PF	50V CERAMIC C	
C201	QFN81HK-333	0.033MF	50V MYLAR	
C202	QFN81HK-333	0.033MF	50V MYLAR	
C203	QCS21HJ-181	180PF	50V CERAMIC	
C204	QCS21HJ-181	180PF	50V CERAMIC	
C205	QCS21HJ-470	47PF	50V CERAMIC C	
C206	QCS21HJ-470	47PF	50V CERAMIC C	
C303	QCS21HJ-151	150PF	50V CERAMIC	
C304	QCS21HJ-151	150PF	50V CERAMIC	
C305	QFN81HK-103	0.01MF	50V MYLAR	
C306	QFN81HK-103	0.01MF	50V MYLAR	
C307	QCS21HJ-331	330PF	50V CERAMIC C	
C307	QCS21HJ-470	47PF	50V CERAMIC A	

RESISTORS

△	ITEM	PART NUMBER	DESCRIPTION	AREA
	R101	QRD161J-4R7	4.7	1/6W CARBON
	R103	QRD161J-104	100K	1/6W CARBON
	R104	QRD161J-104	100K	1/6W CARBON
	R105	QRD161J-471	470	1/6W CARBON
	R106	QRD161J-471	470	1/6W CARBON
	R111	QRD161J-471	470	1/6W CARBON
	R112	QRD161J-471	470	1/6W CARBON
	R113	QRD161J-471	470	1/6W CARBON
	R114	QRD161J-471	470	1/6W CARBON
	R115	QRD161J-471	470	1/6W CARBON
	R116	QRD161J-471	470	1/6W CARBON
	R117	QRD161J-471	470	1/6W CARBON B
	R117	QRD161J-471	470	1/6W CARBON DBS
	R117	QRD161J-182	1.8K	1/6W CARBON C
	R118	QRD161J-471	470	1/6W CARBON A
	R118	QRD161J-471	470	1/6W CARBON B
	R118	QRD161J-471	470	1/6W CARBON DBS
	R118	QRD161J-182	1.8K	1/6W CARBON C
	R119	QRD161J-471	470	1/6W CARBON A
	R120	QRD161J-471	470	1/6W CARBON
	R123	QRZ0077-101	100	1/4W FUSIBLE
	R124	QRZ0077-101	100	1/4W FUSIBLE
	R126	QRD161J-104	100K	1/6W CARBON
	R127	QRD161J-104	100K	1/6W CARBON
	R131	QRD161J-103	10K	1/6W CARBON
	R132	QRD161J-103	10K	1/6W CARBON
	R133	QRD161J-105	1M	1/6W CARBON
	R134	QRD161J-103	10K	1/6W CARBON
	R135	QRD161J-474	470K	1/6W CARBON
	R136	QRD161J-562	5.6K	1/6W CARBON
	R137	QRD161J-473	47K	1/6W CARBON
	R138	QRD161J-392	3.9K	1/6W CARBON
	R139	QRD161J-104	100K	1/6W CARBON
	R140	QRD161J-104	100K	1/6W CARBON
	R141	QRD161J-223	22K	1/6W CARBON
	R143	QRD161J-102	1K	1/6W CARBON
	R144	QRD161J-102	1K	1/6W CARBON
	R146	QRD161J-122	1.2K	1/6W CARBON
	R147	QRD161J-473	47K	1/6W CARBON
	R148	QRD161J-273	27K	1/6W CARBON
	R201	QRD161J-562	5.6K	1/6W CARBON
	R202	QRD161J-562	5.6K	1/6W CARBON
	R203	QRD161J-472	4.7K	1/6W CARBON
	R204	QRD161J-472	4.7K	1/6W CARBON
	R205	QVDA98W-EF5B	250K (W)	0.3W VARIABLE

△ : SAFETY PARTS

RESISTORS

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	R207	QRD161J-223	22K 1/6W CARBON	
	R208	QRD161J-223	22K 1/6W CARBON	
	R209	QRD161J-105	1M 1/6W CARBON	
	R210	QRD161J-105	1M 1/6W CARBON	
	R211	QVD8A7B-AF5VA	250K (W) 50mW VARIABLE	
	R251	QRD161J-122	1.2K 1/6W CARBON	
	R252	QRD161J-122	1.2K 1/6W CARBON	
	R253	QRD161J-122	1.2K 1/6W CARBON	
	R254	QRD161J-122	1.2K 1/6W CARBON	
	R255	QRD161J-122	1.2K 1/6W CARBON	
	R256	QRD161J-122	1.2K 1/6W CARBON	
	R257	QRD161J-122	1.2K 1/6W CARBON	
	R258	QRD161J-122	1.2K 1/6W CARBON	
	R259	QRD161J-122	1.2K 1/6W CARBON	
	R260	QRD161J-122	1.2K 1/6W CARBON	
	R265	QRD161J-104	100K 1/6W CARBON	
	R301	QRD161J-102	1K 1/6W CARBON	C
	R302	QRD161J-102	1K 1/6W CARBON	C
	R303	QRD161J-473	47K 1/6W CARBON	
	R304	QRD161J-473	47K 1/6W CARBON	
	R305	QRD161J-471	470 1/6W CARBON	
	R306	QRD161J-471	470 1/6W CARBON	
	R307	QRD161J-5R6	5.6 1/6W CARBON	
	R308	QRD161J-5R6	5.6 1/6W CARBON	
	R309	QRD161J-101	100 1/6W CARBON	
	R310	QRD161J-101	100 1/6W CARBON	
	R311	QRD161J-562	5.6K 1/6W CARBON	
	R312	QRD161J-562	5.6K 1/6W CARBON	
	R313	QRD161J-270	27 1/6W CARBON	
	R314	QRD161J-270	27 1/6W CARBON	
	R315	QRD161J-561	560 1/6W CARBON	
	R316	QRD161J-561	560 1/6W CARBON	
	R317	QRD161J-562	5.6K 1/6W CARBON	
	R318	QRD161J-562	5.6K 1/6W CARBON	
	R319	QRD161J-222	2.2K 1/6W CARBON	
	R320	QRD161J-222	2.2K 1/6W CARBON	
	R321	QRD161J-272	2.7K 1/6W CARBON	
	R322	QRD161J-272	2.7K 1/6W CARBON	
	R323	QRD161J-273	27K 1/6W CARBON	
	R324	QRD161J-273	27K 1/6W CARBON	
	R325	QRD161J-273	27K 1/6W CARBON	
	R326	QRD161J-273	27K 1/6W CARBON	
	R327	QRD161J-150	15 1/6W CARBON	C
	R327	QRD161J-180	18 1/6W CARBON	A
	R327	QRD161J-180	18 1/6W CARBON	B
	R327	QRD161J-180	18 1/6W CARBON	DBS
	R328	QRD161J-150	15 1/6W CARBON	C
	R328	QRD161J-180	18 1/6W CARBON	A
	R328	QRD161J-180	18 1/6W CARBON	B
	R328	QRD161J-180	18 1/6W CARBON	DBS
	R329	QRD161J-221	220 1/6W CARBON	
	R330	QRD161J-221	220 1/6W CARBON	
	R331	QRD161J-153	15K 1/6W CARBON	
	R332	QRD161J-153	15K 1/6W CARBON	
	R333	QRD161J-184	180K 1/6W CARBON	
	R334	QRD161J-184	180K 1/6W CARBON	
	R335	QRD161J-331	330 1/6W CARBON	
	R336	QRD161J-331	330 1/6W CARBON	
	R337	QRD161J-104	100K 1/6W CARBON	
	R338	QRD161J-104	100K 1/6W CARBON	


OTHERS

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
		EMG7331-001	FUSE CLIP	
		ENZ2006-001	SHIELD CASE	C
		EWT011-091	TERMINAL WIRE	
		E03532-001	SHIELD CASE	C
		E11418-002	CIRCUIT BOARD	A
		E11418-002	CIRCUIT BOARD	B
		E11418-002BS	CIRCUIT BOARD	C
		E65508-002	TAB	DBS
		E65508-002	TAB	C
		E65508-002	TAB	DBS
		E67132-T2R5	T2R5 FUSE LABEL	
		E67132-T4R0	T4R0 FUSE LABEL	A
		E27764-202	R.TERMINAL	
		E67764-203	TERMINAL ASSY	B
		E67764-203	TERMINAL ASSY	C
		E74008-001	SHIELD BKT	DBS
J101		EMN00TV-405A	PIN JACK ASSY	
J102		EMN00TV-402A	PIN JACK ASSY	
J103		EMN00TV-402A	PIN JACK ASSY	
J104		EMN00TP-404A	PIN JACK ASSY	
J105		E03623-003	DIN SOCKET	
J109		EMV7112-009	SOCKET	
L301		EQL0111-391	INDUCTOR	C
L302		EQL0111-391	INDUCTOR	C
S201		ESP0001-007	PUSH SWITCH	
S202		ESP0001-007	PUSH SWITCH	
S203		ESP0001-007	PUSH SWITCH	
S204		ESP0001-007	PUSH SWITCH	
S205		ESP0001-007	PUSH SWITCH	
S206		QST4261-E11	PUSH SWITCH	
S207		QST4261-E11	PUSH SWITCH	
S208		QST4102-E08	PUSH SWITCH	
S209		QST4102-E08	PUSH SWITCH	

▲ : SAFETY PARTS

■ TPS-318 [A] Voltage Selector PC Board Ass'y

(Except for Europe, Australia, West Germany, U.K.)

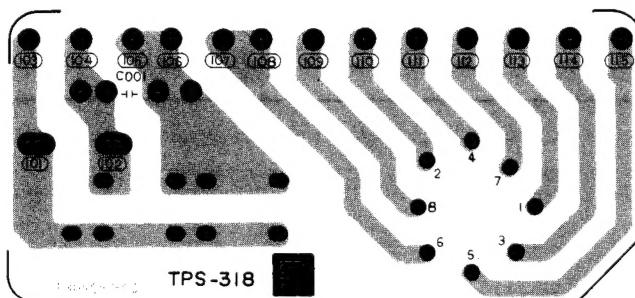


CAPACITORS

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
	C001	QFH53BM-103M	0.01MF 250V M. MYLAR	

OTHERS

▲	ITEM	PART NUMBER	DESCRIPTION	AREA
		E302057-001	CIRCUIT BOARD	
		E43727-001	TAB	
		E65508-001	TAB	
▲		QMC0637-004	AC SOCKET	
▲		QSR0085-006U	V.SELECTOR	

Packing Materials and Part Numbers

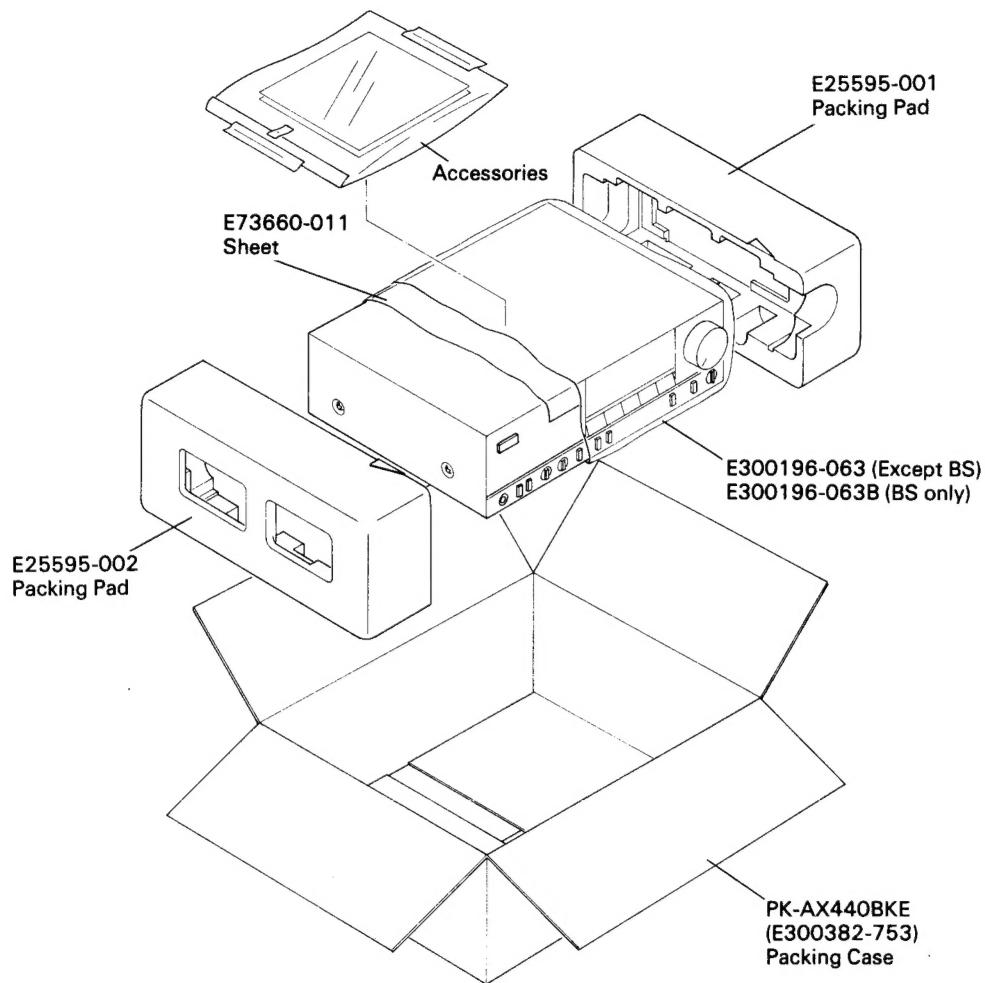

Accessories List

△	Item No.	Part Number	Part Name	Q'ty	Description	Areas
		E30580-1366A E30580-1366ABS BT20046C BT20048C BT20029C	Instruction Book Instruction Book Service Information Card Warranty Card Warranty Card	1 1 1 1 1	for Australia	P, PG, E, A, G, U BS P, PG P, PG A
		BT20098 BT20064 BT20066 BT20060 QZL1008-001	Warranty Card Warranty Card EEC AGENCY Warranty Card FTZ Information Sheet	1 1 1 1 1	for New Zealand	A G G, BS BS G
		EO4056 E41202-2 E41202-2B	Siemens Plug Envelope Envelope	1 1 1		PG, U P, PG, E, A, G, U BS

△: Safety Parts


The Marks for Designated Areas

- P, PG..... U.S. Military Market
- E Europe
- A Australia
- G West Germany
- BS U.K.
- U Other Countries


No mark indicates all areas.

Internal Block Diagrams of ICs


■ LC7818 (IC101)

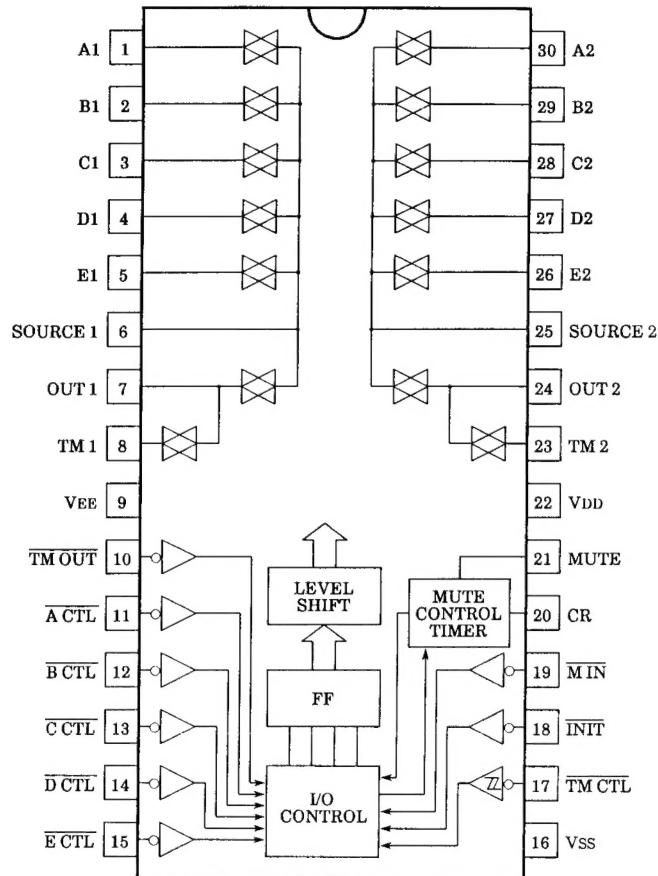

■ M5219P (IC301)

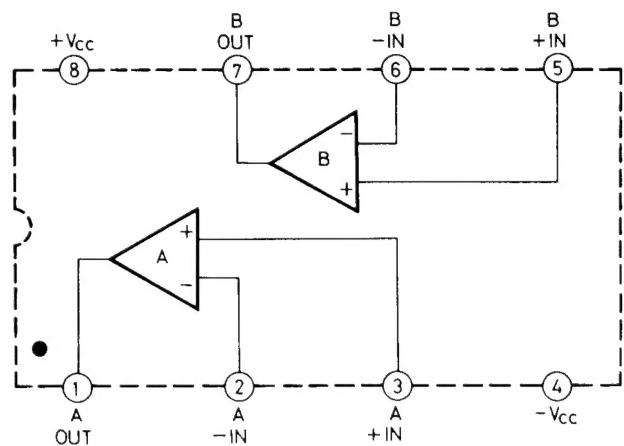

■ VC5022 [X, Y] (IC751, IC752)

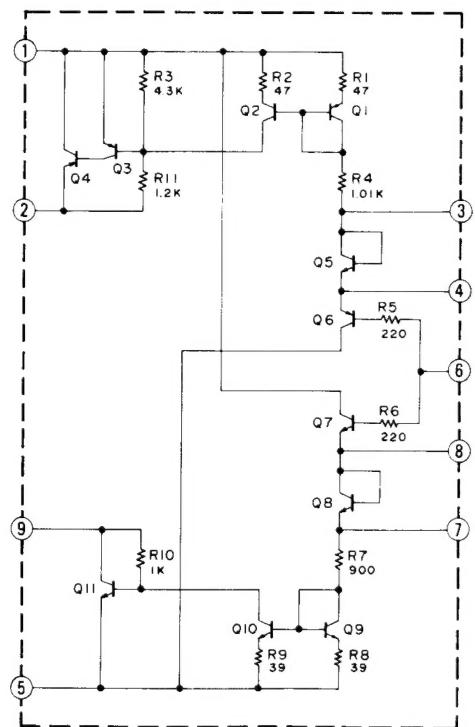

■ TA7317P (IC102, IC901)

